RECOMMENDED INSTALLATION HEIGHT FOR EACH VAN MODEL

SATURN GO

KEEP YOUR VAN SAFE.

WARNINGS

Always read the mounting instructions carefully.

The measures given on the following pages are **recommended** but not binding.

Daken S.p.A. reserves the right to make any change or variation to the products.

Each mounting must be **assessed** by the **installer** on a case-by-case basis and in consideration of the vehicle characteristics.

INDEX

CITROËN

Nemo (2007-2013) 4 →
Berlingo (> 2018) 5 →
Jumpy (> 2017) 6 →
Jumper (> 2014) 7 →

DACIA

Dokker (2013-2021) 8 →

FIAT

Fiorino (> 2007) 9 →
Doblò (> 2009) 10 →
Talento (2016-2020) 11 →
Scudo (> 2021) 12 →
Ducato (> 2014) 13 →

FORD

Courier (2013 - 2024) 14 →
Courier (> 2024) 15 →
Connect (> 2014) 16 →
Custom (2012 - 2022) 17 →
Custom (> 2023) 18 →
Transit (> 2014) 19 →

HYUNDAI

H350 (> 2016) 20 →

IVECO

Daily (> 2014) 21 →

MAN

TGE 3140 (> 2017) 22 →

MAXUS

Edeliver 3 (> 2018) 23 →
Edeliver 9 (> 2019) 24 →

MERCEDES

Citan (<= 2021) 25 →
Citan (> 2021) 26 →
Vito (> 2014) 27 →
Sprinter (> 2018) 28 →

NISSAN

E-nv 200 (2014-2021) 29 →
Nv 250 (2019-2021) 30 →
Townstar Van (> 2021) 31 →
Primastar / nv-300 (>2016) 32 →
Interstar (2022) 33 →

OPEL

Combo (> 2018) 34 →
Vivaro B (2014-2019) 35 →
Vivaro C (> 2019) 36 →
Movano (> 2022) 37 →

PEUGEOT

Bipper (2007-2016) 38 →
Partner (> 2018) 39 →
Expert (> 2016) 40 →
Boxer (> 2014) 41 →

RENAULT

Kangoo (2008-2021) 42 →
Kangoo Van (>2021) 43 →
Express Van (> 2020) 44 →
Trafic (> 2014) 45 →
Master (2019-2023) 46 →
Master (> 2024) 47 →

TOYOTA

Proace City (> 2020) 48 →
Proace (> 2016) 49 →

VOLKSWAGEN

Caddy (2021 - 2024) 50 →
Caddy (> 2024) 51 →
Transporter (> 2014) 52 →
ID-Buzz (> 2022) 53 →
Crafter (> 2016) 54 →

SATURN GO


SATURN GO

CITROËN

CITROËN NEMO 2007-2013




INSTALLATION ON THE REAR DOOR

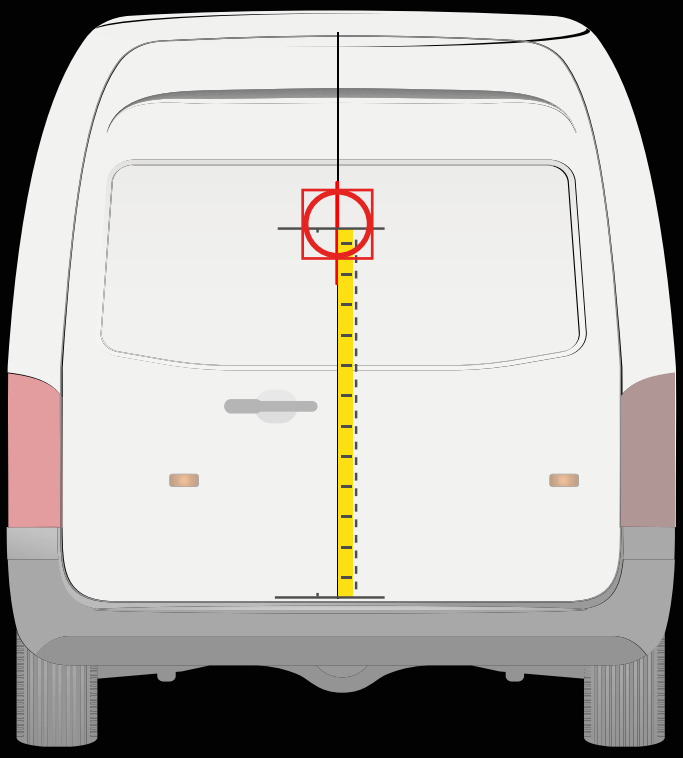

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**80 cm**

INSTALLATION ON THE LATERAL DOOR

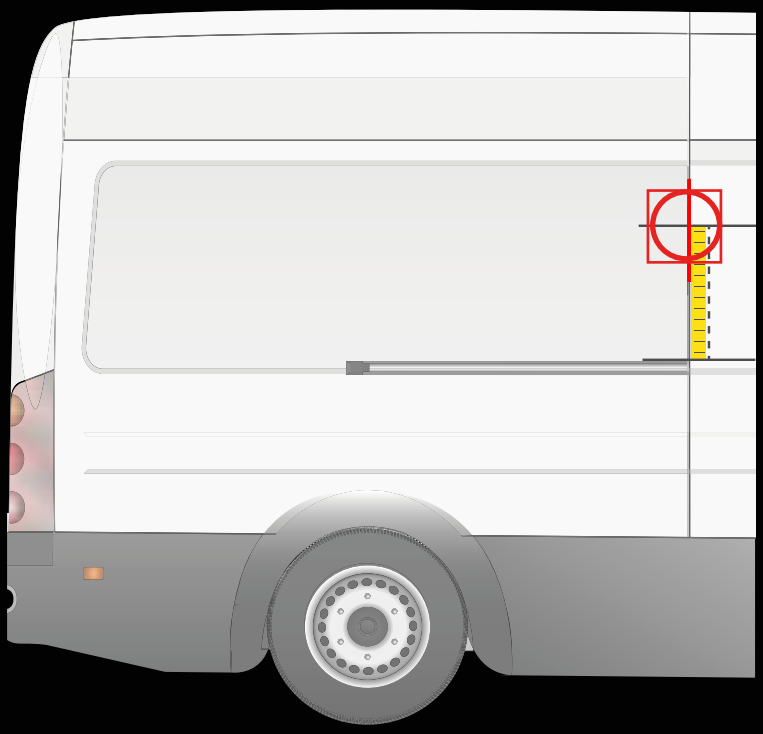

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**20 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


SATURN GO

CITROËN

CITROËN BERLINGO > 2018




INSTALLATION ON THE REAR DOOR

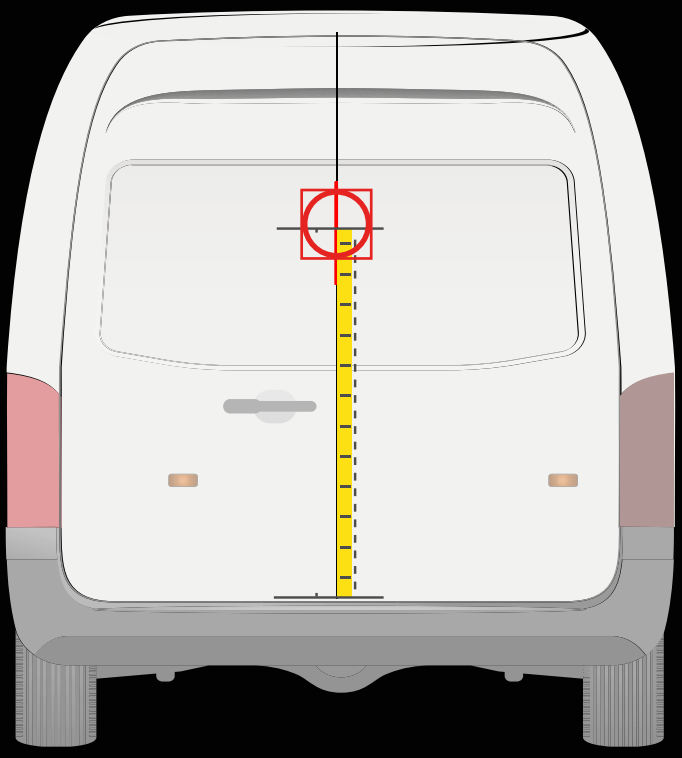

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**80 cm**

INSTALLATION ON THE LATERAL DOOR

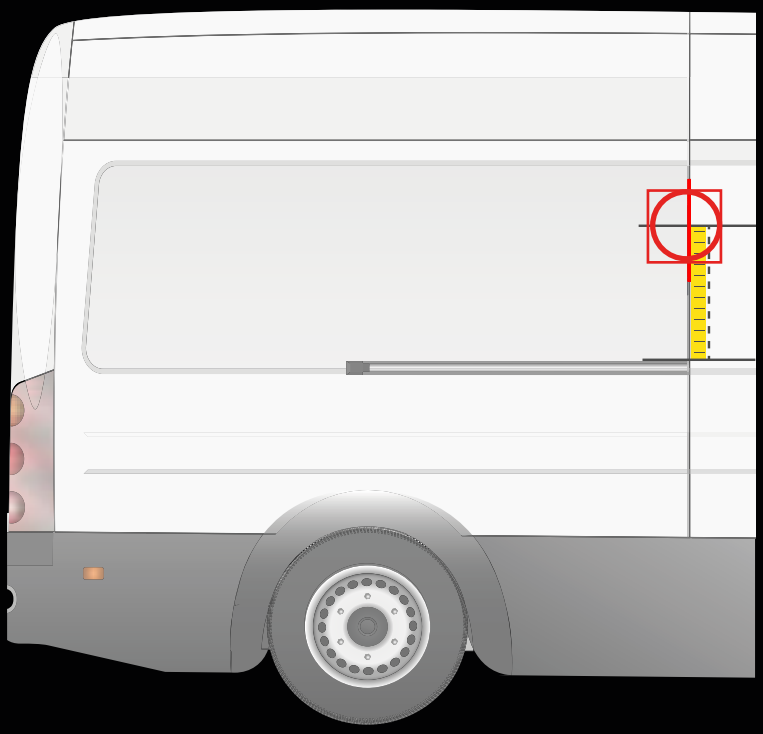

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**25 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


SATURN GO

CITROËN

CITROËN JUMPY > 2017




INSTALLATION ON THE REAR DOOR

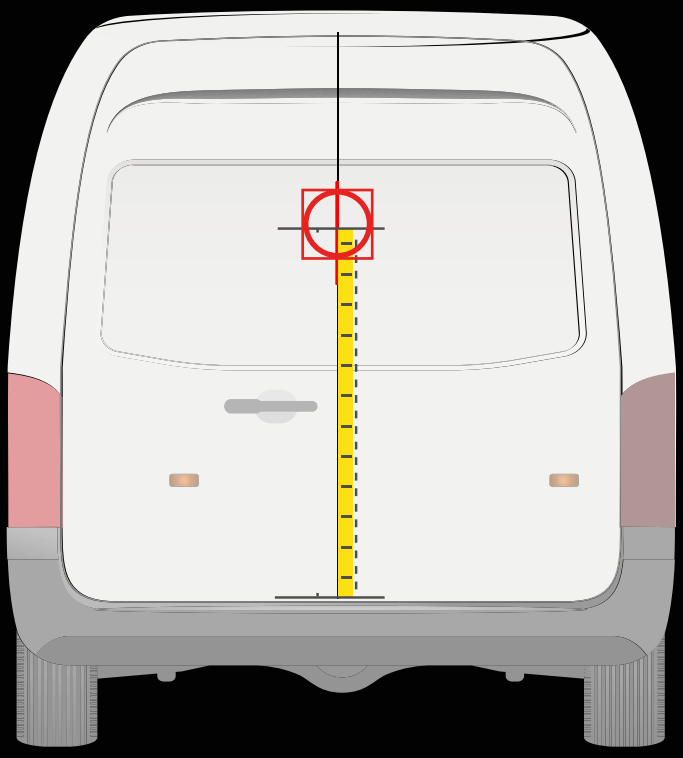

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**95 cm**

INSTALLATION ON THE LATERAL DOOR

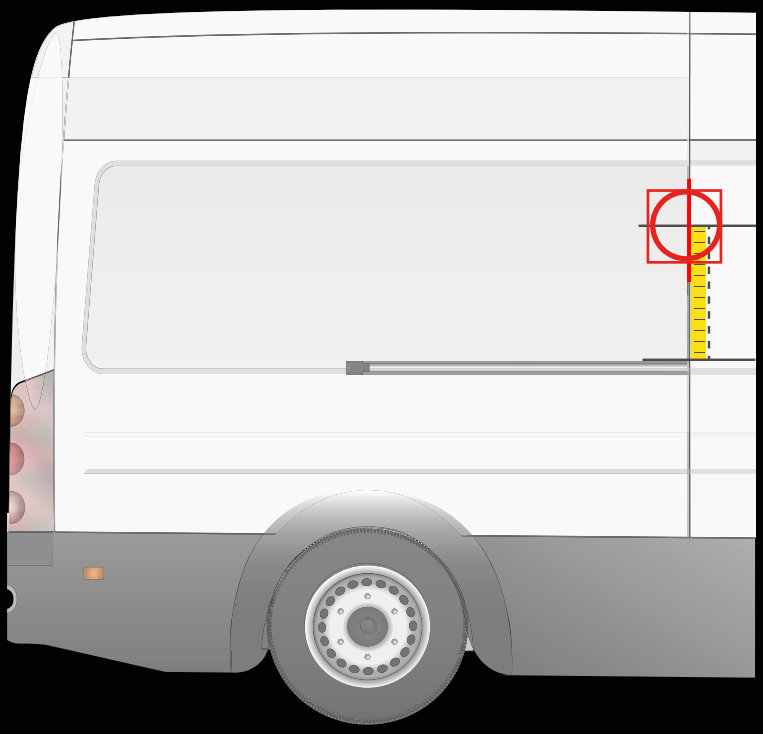

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**30 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


SATURN GO

CITROËN

CITROËN JUMPER > 2014




INSTALLATION ON THE REAR DOOR

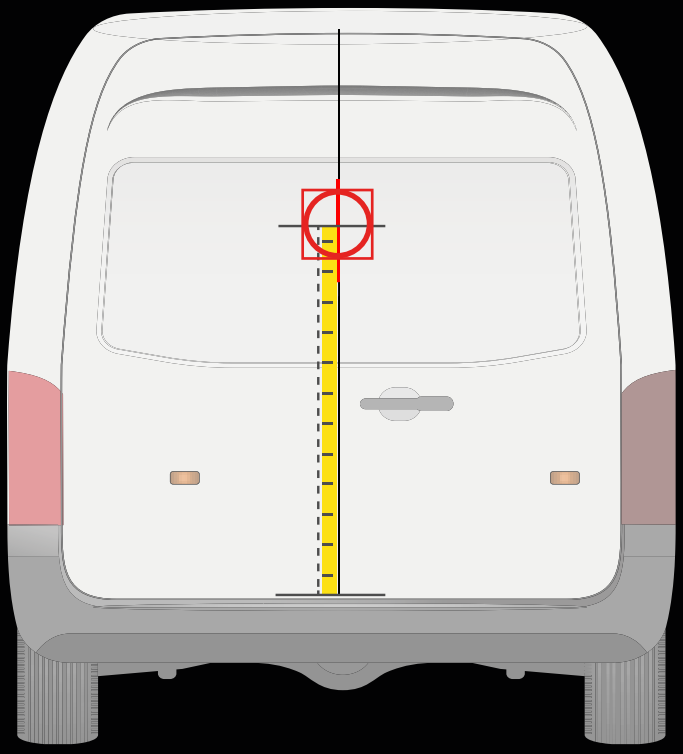

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**112 cm**

INSTALLATION ON THE LATERAL DOOR

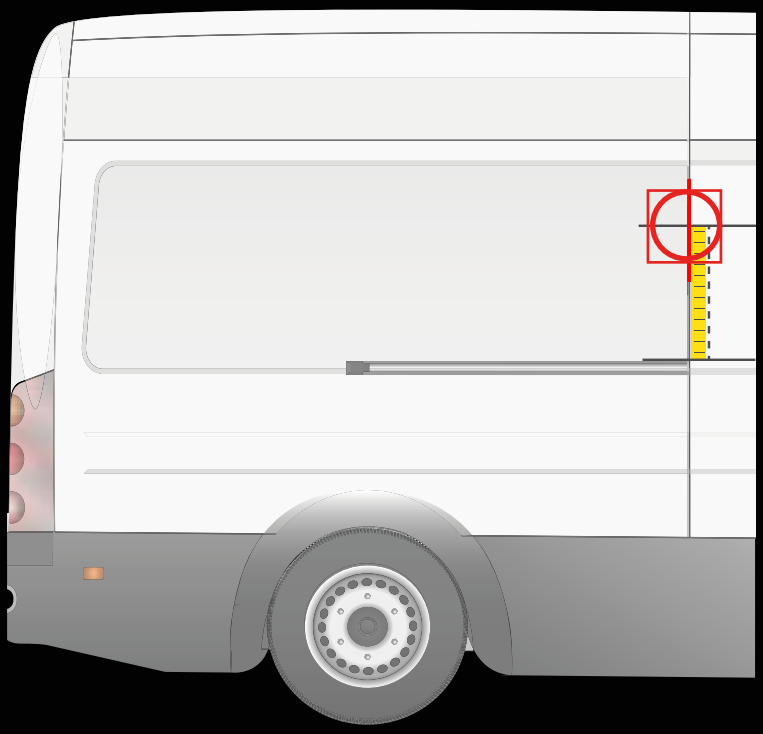

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**20 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


SATURN GO

DACIA

DACIA DOKKER
2013-2021




INSTALLATION ON THE REAR DOOR

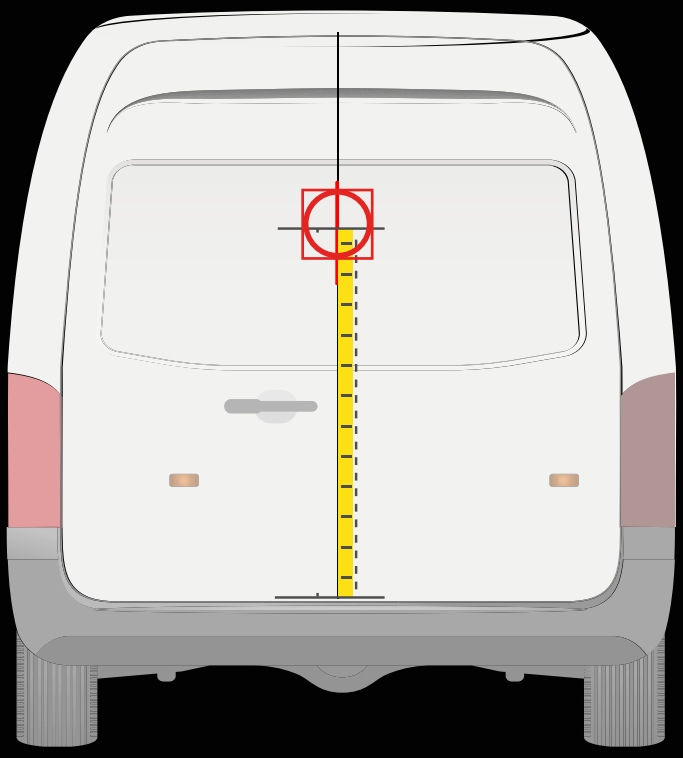

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**75 cm**

INSTALLATION ON THE LATERAL DOOR

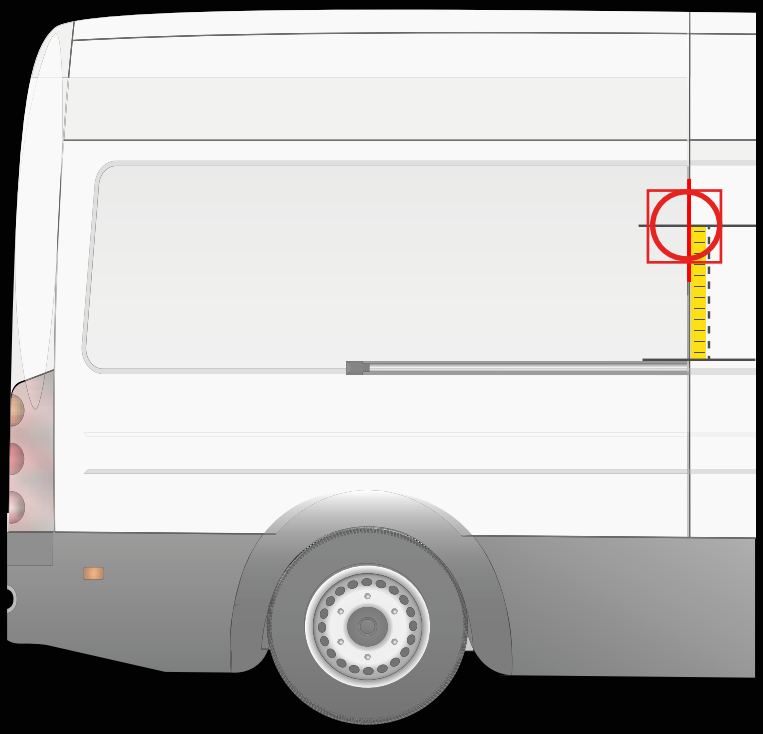

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**15 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


SATURN GO



FIAT FIORINO
> 2007




INSTALLATION ON THE REAR DOOR

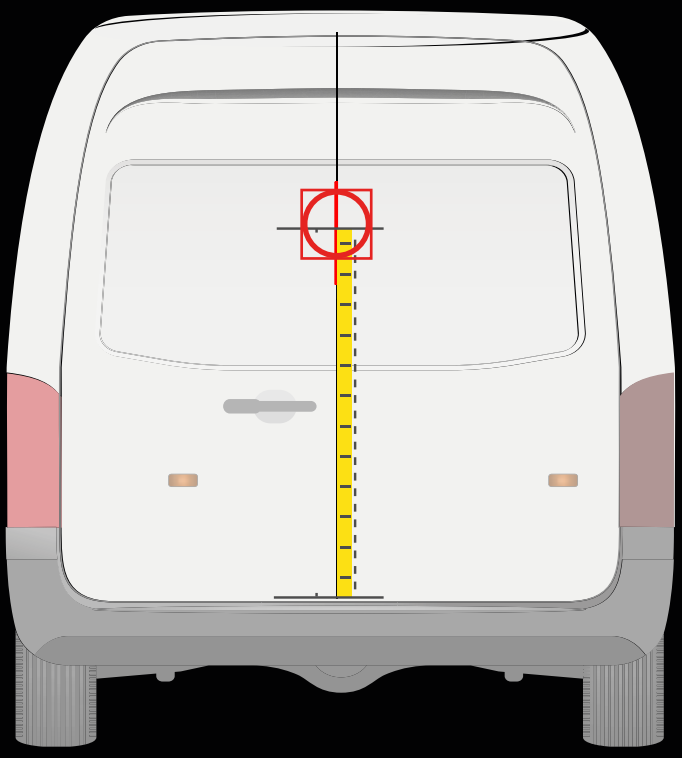

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**80 cm**

INSTALLATION ON THE LATERAL DOOR

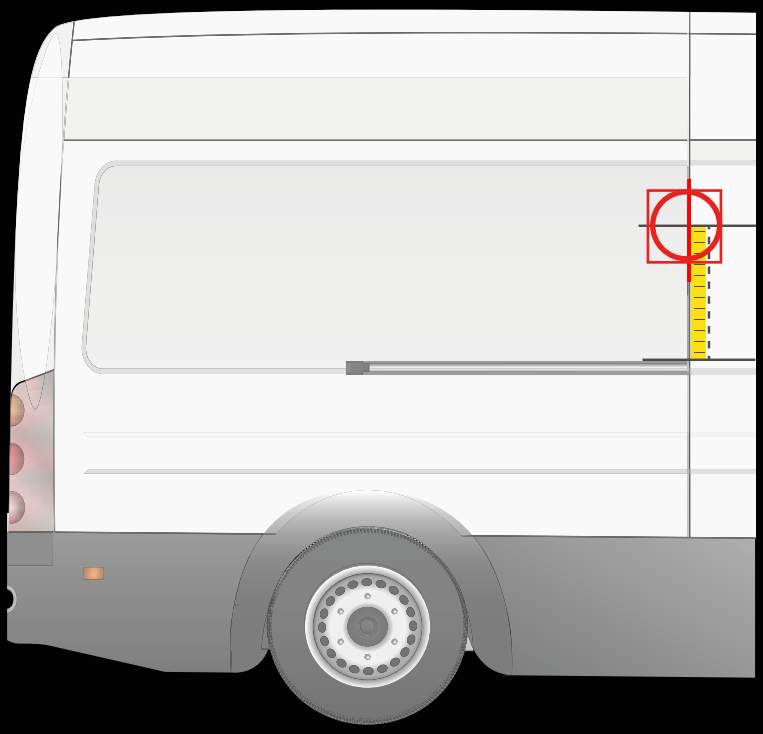

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**20 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


SATURN GO



FIAT DOBLÒ
> 2009




INSTALLATION ON THE REAR DOOR

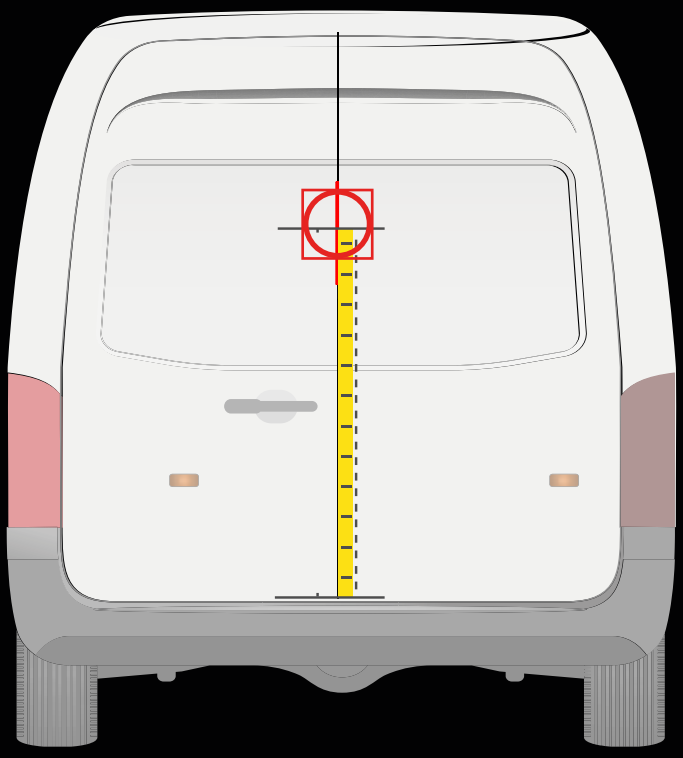

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**90 cm**

INSTALLATION ON THE LATERAL DOOR

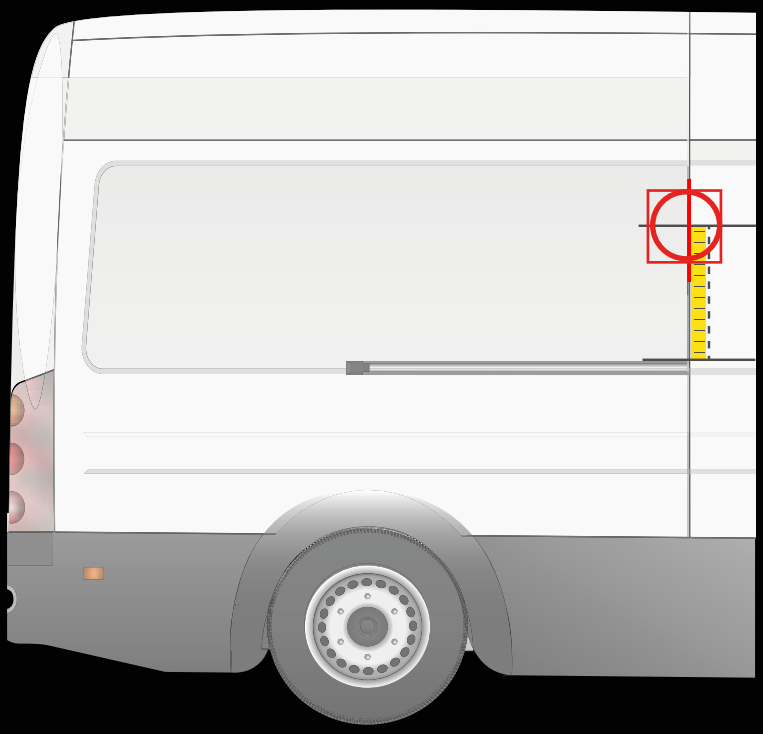

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**20 cm**


The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.

SATURN GO

FIAT TALENTO
2016 - 2020




INSTALLATION ON THE REAR DOOR

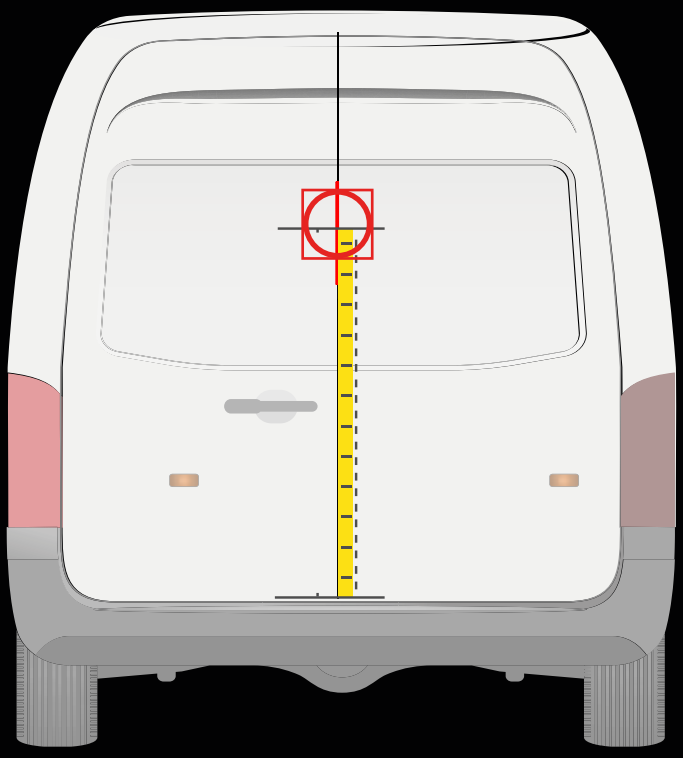

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**84 cm**

INSTALLATION ON THE LATERAL DOOR

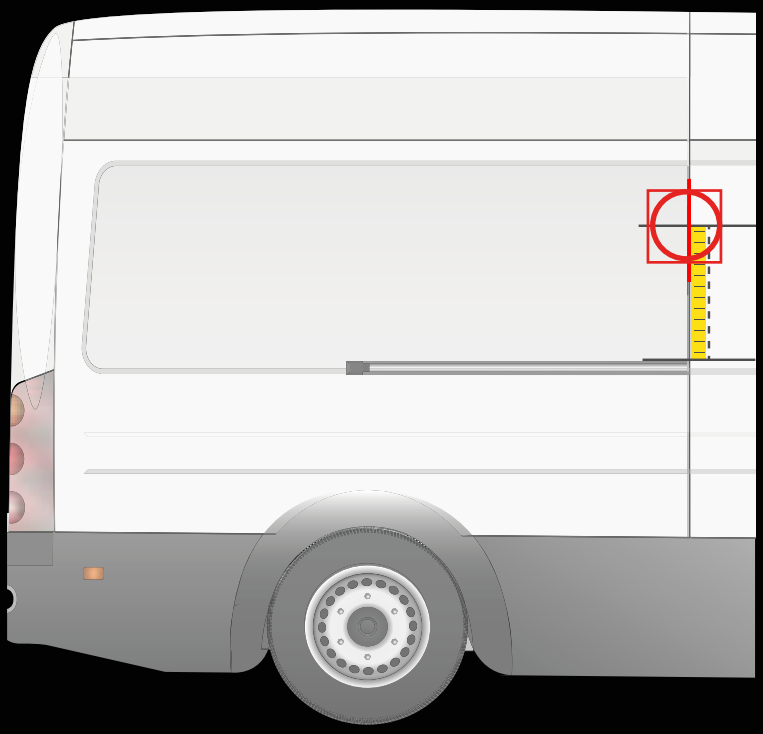

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**30 cm**


The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.

SATURN GO

FIAT SCUDO
> 2021




INSTALLATION ON THE REAR DOOR

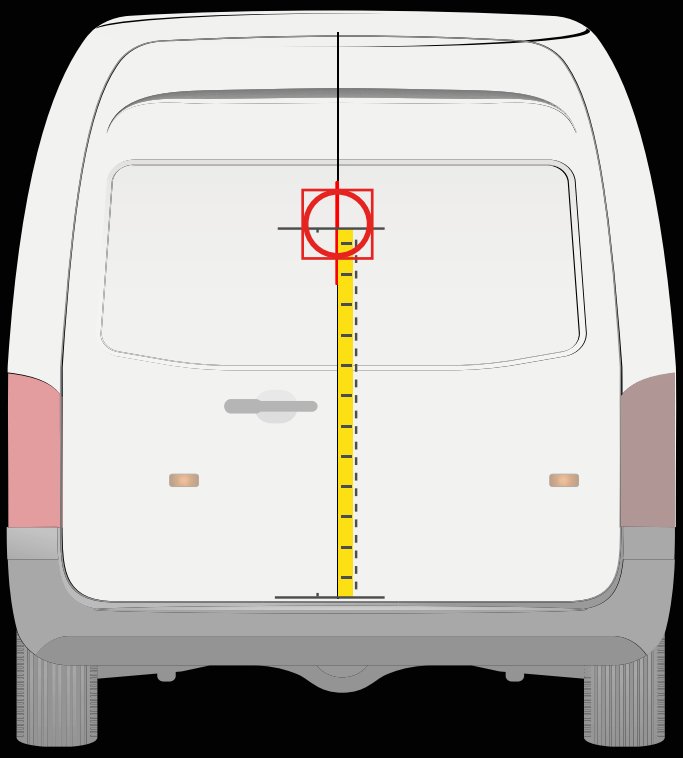

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**95 cm**

INSTALLATION ON THE LATERAL DOOR

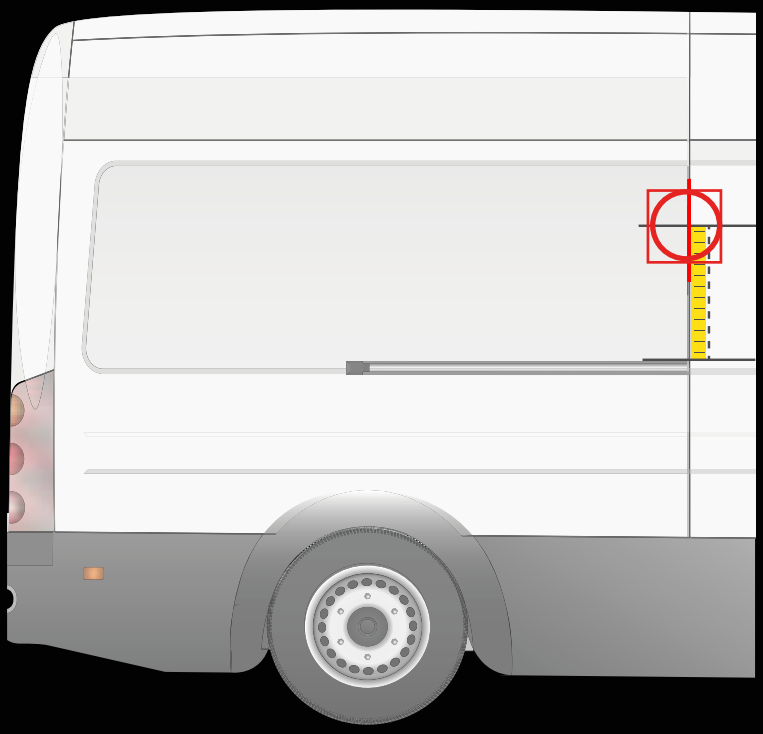

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**30 cm**


The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.

SATURN GO

FIAT DUCATO
> 2014




INSTALLATION ON THE REAR DOOR

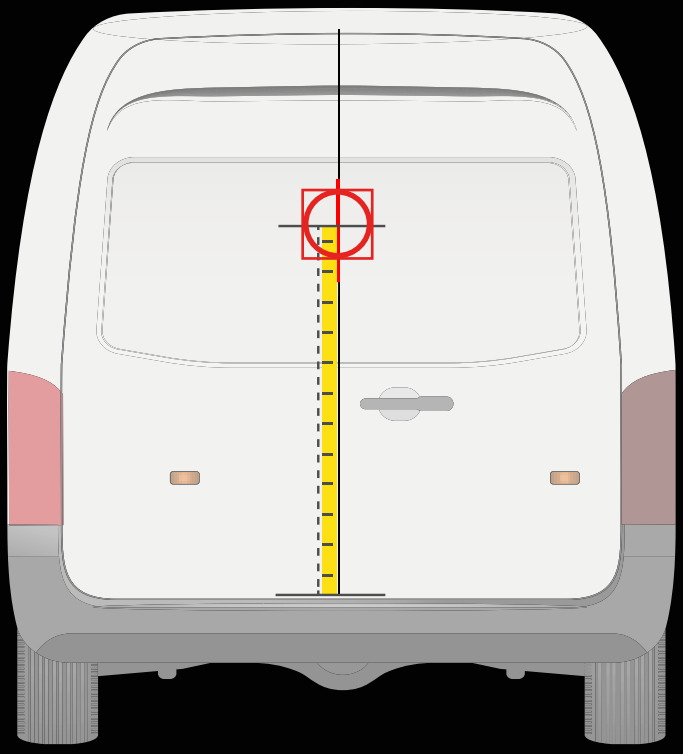

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**112 cm**

INSTALLATION ON THE LATERAL DOOR

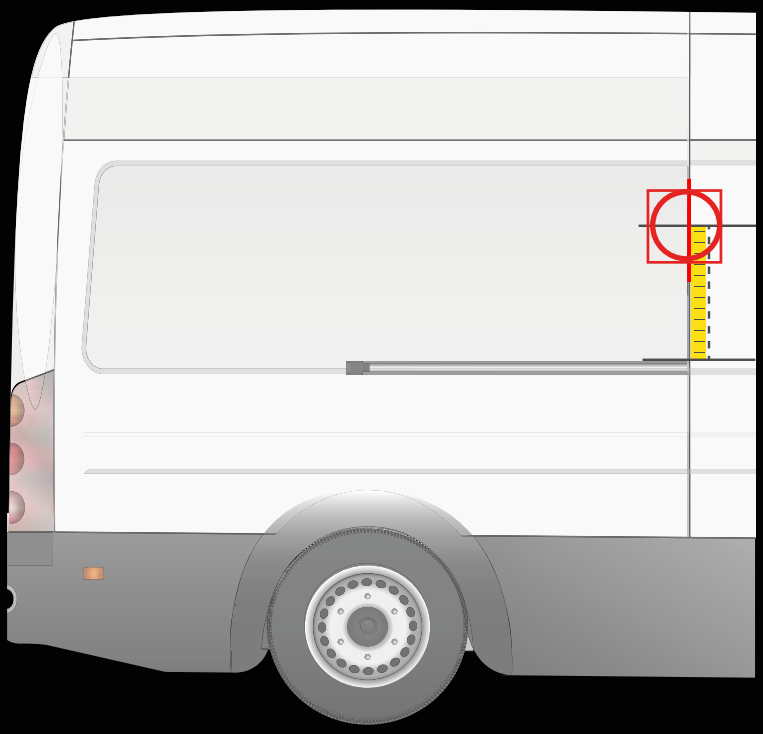

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**20 cm**


The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.

SATURN GO

FORD COURIER
2013 - 2024




INSTALLATION ON THE REAR DOOR

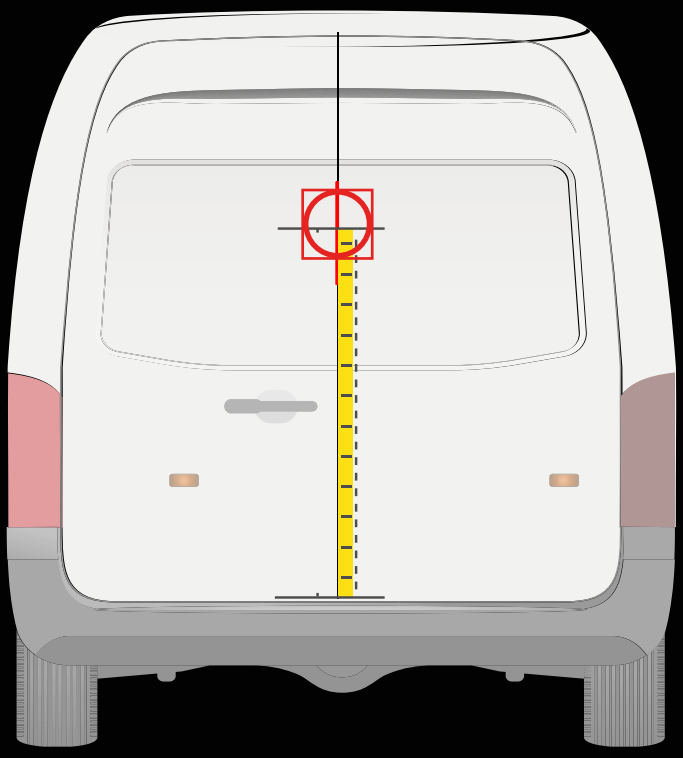

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**95 cm**

INSTALLATION ON THE LATERAL DOOR

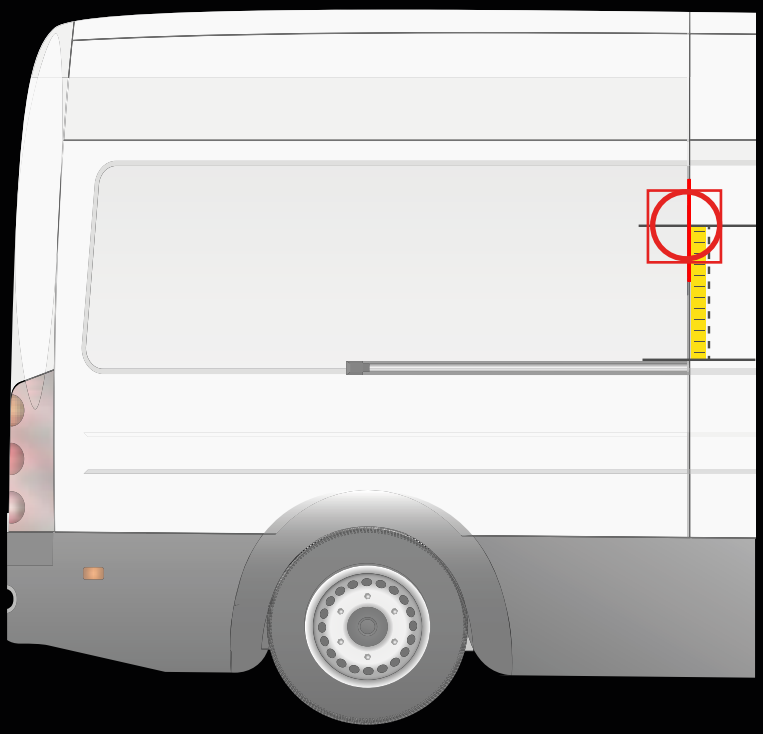

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**15 cm**


The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.

SATURN GO

FORD COURIER > 2024




INSTALLATION ON THE REAR DOOR

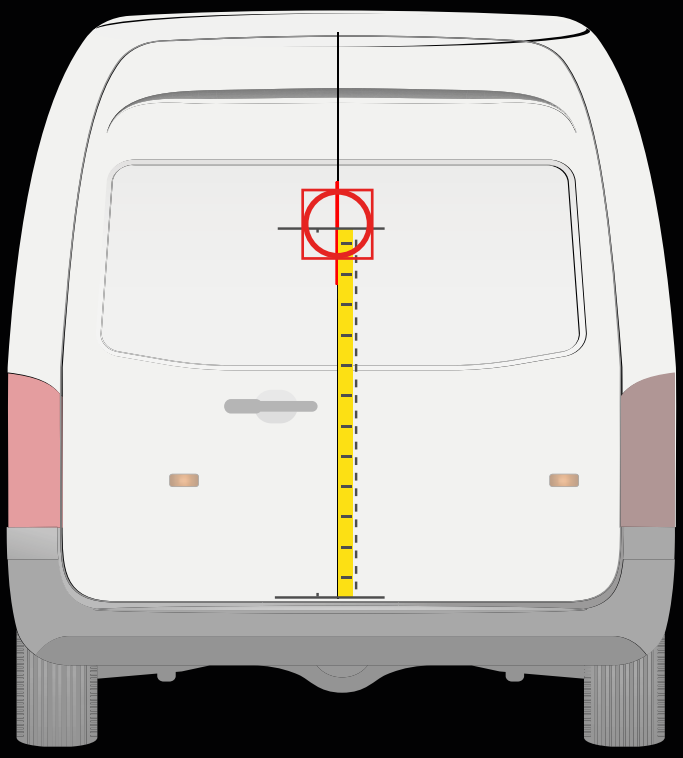

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**85 cm**

INSTALLATION ON THE LATERAL DOOR

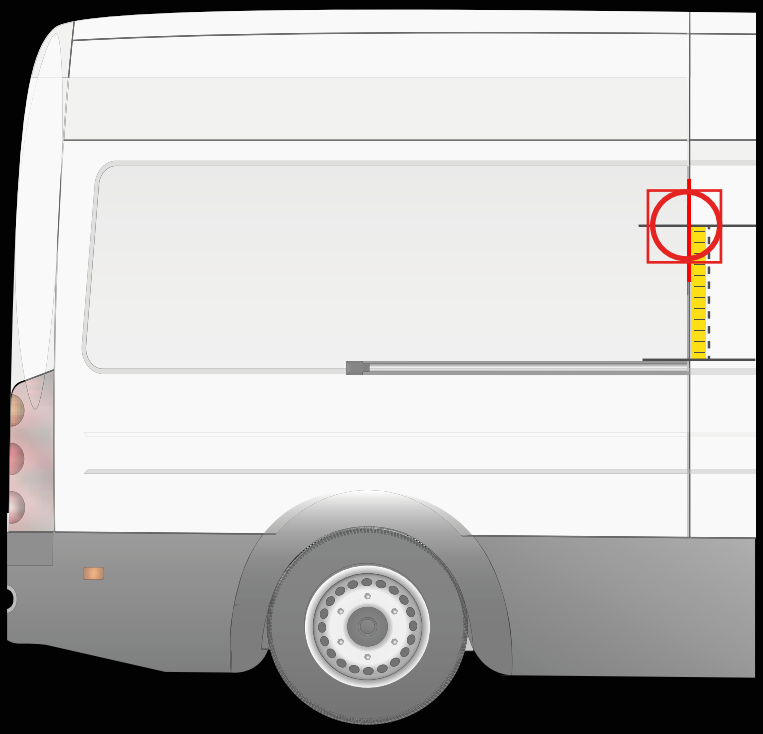

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**20 cm**


The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.

SATURN GO

FORD CONNECT
> 2014




INSTALLATION ON THE REAR DOOR

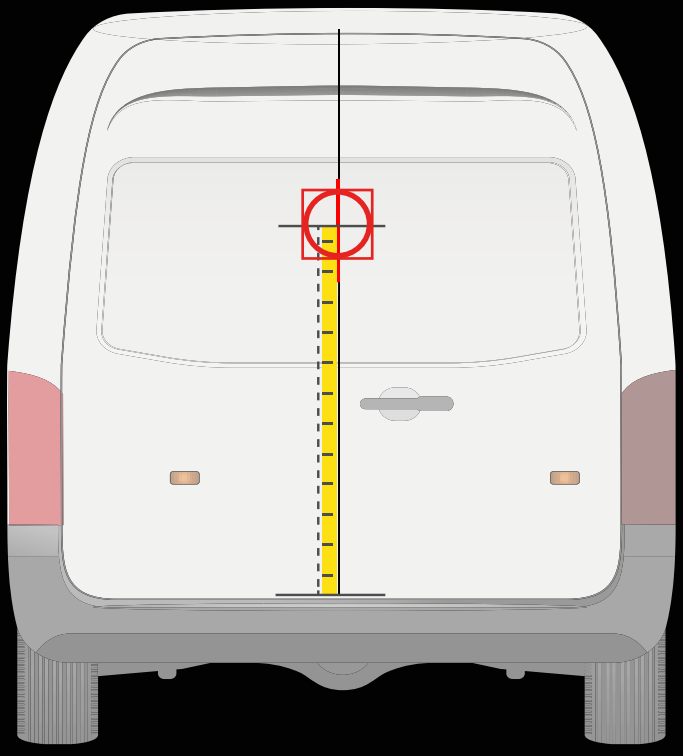

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**85 cm**

INSTALLATION ON THE LATERAL DOOR

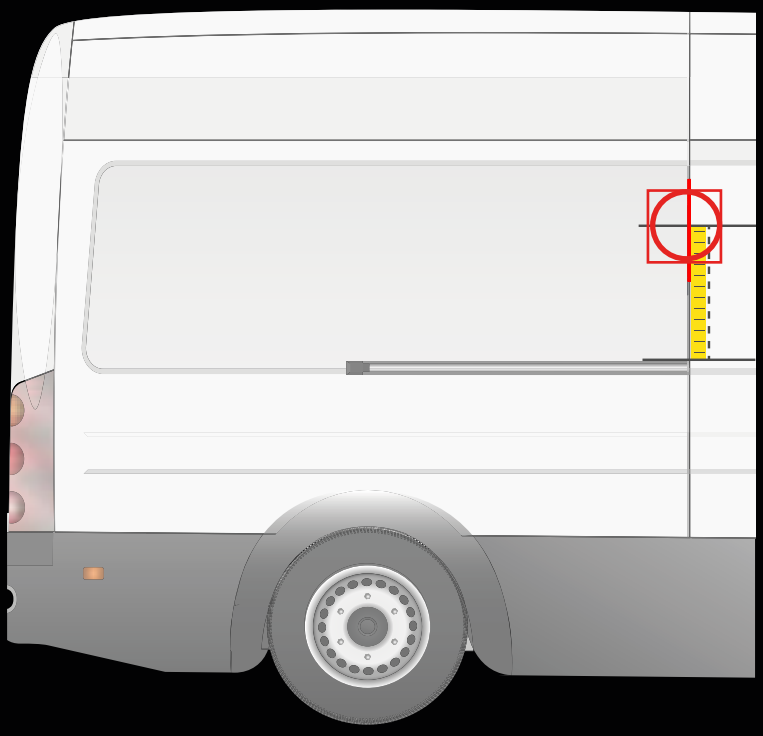

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**27 cm**


The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.

SATURN GO

FORD CUSTOM
2012 - 2022




INSTALLATION ON THE REAR DOOR

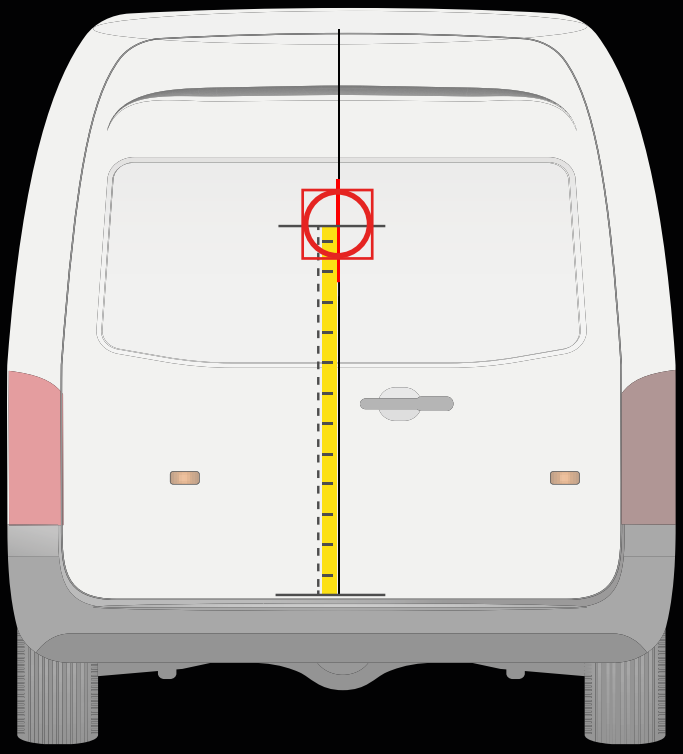

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**100 cm**

INSTALLATION ON THE LATERAL DOOR

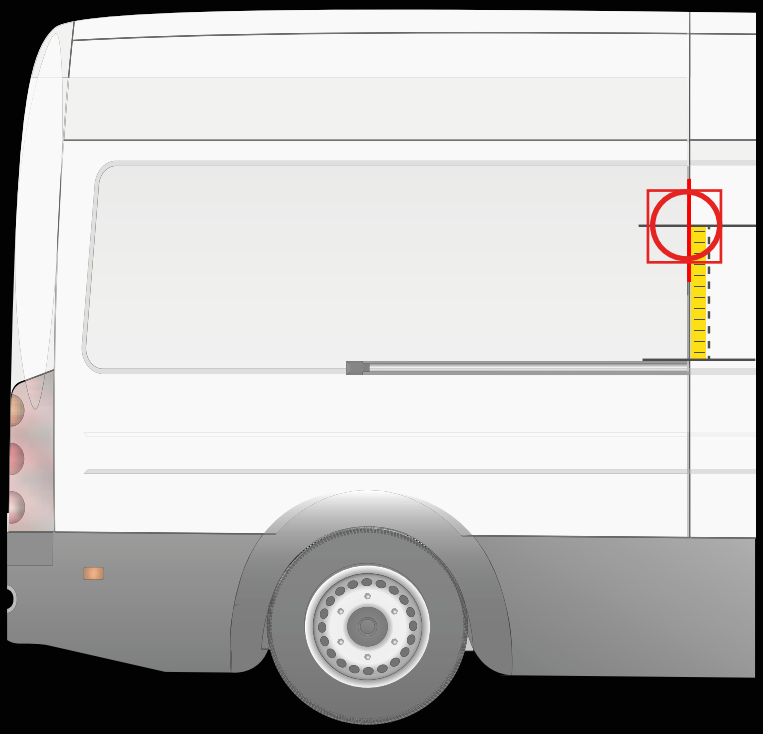

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**30 cm**


The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.

SATURN GO

FORD CUSTOM
> 2023




INSTALLATION ON THE REAR DOOR

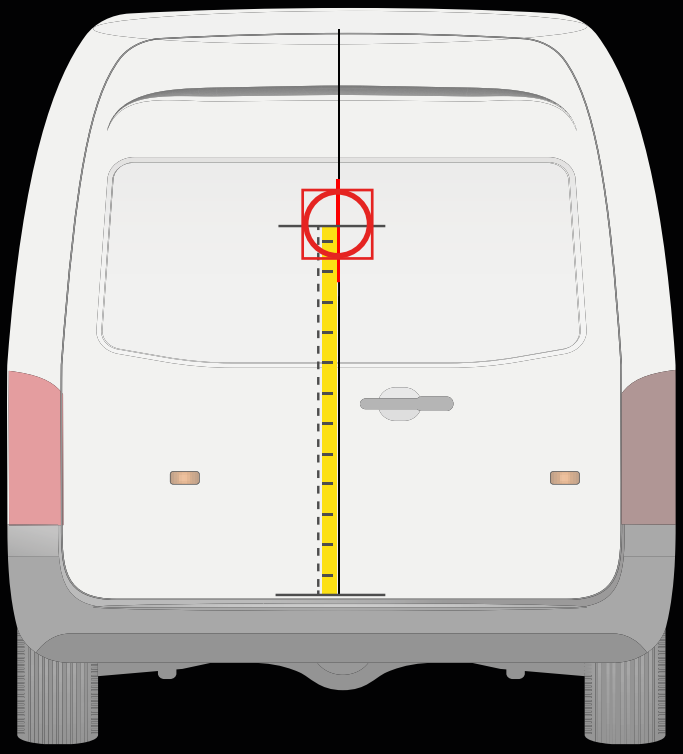

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**115 cm**

INSTALLATION ON THE LATERAL DOOR

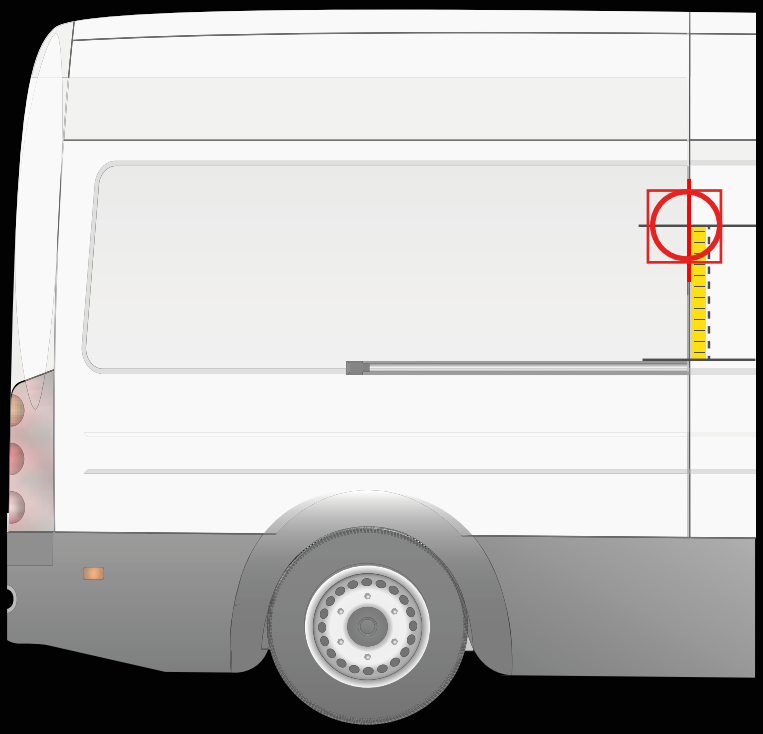

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**30 cm**


The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.

SATURN GO

FORD TRANSIT > 2014




INSTALLATION ON THE REAR DOOR

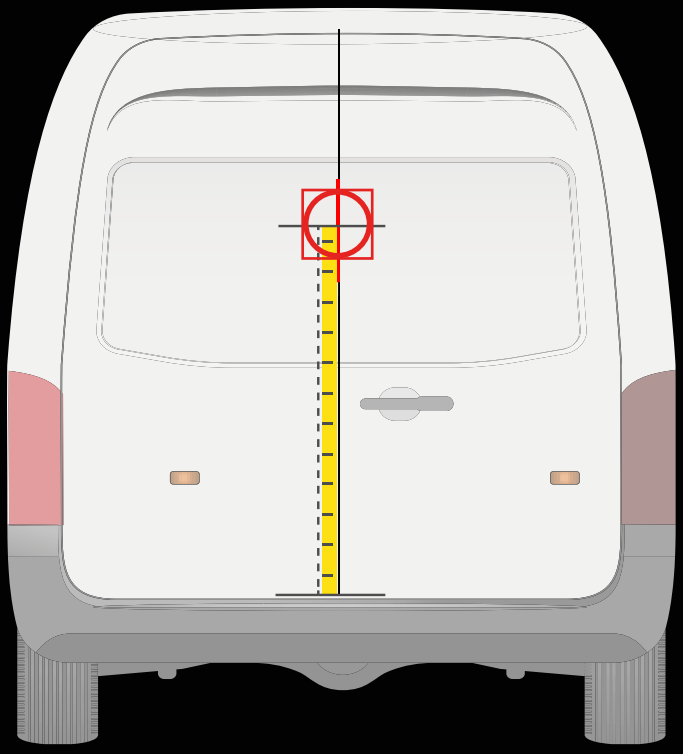

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**110 cm**

INSTALLATION ON THE LATERAL DOOR

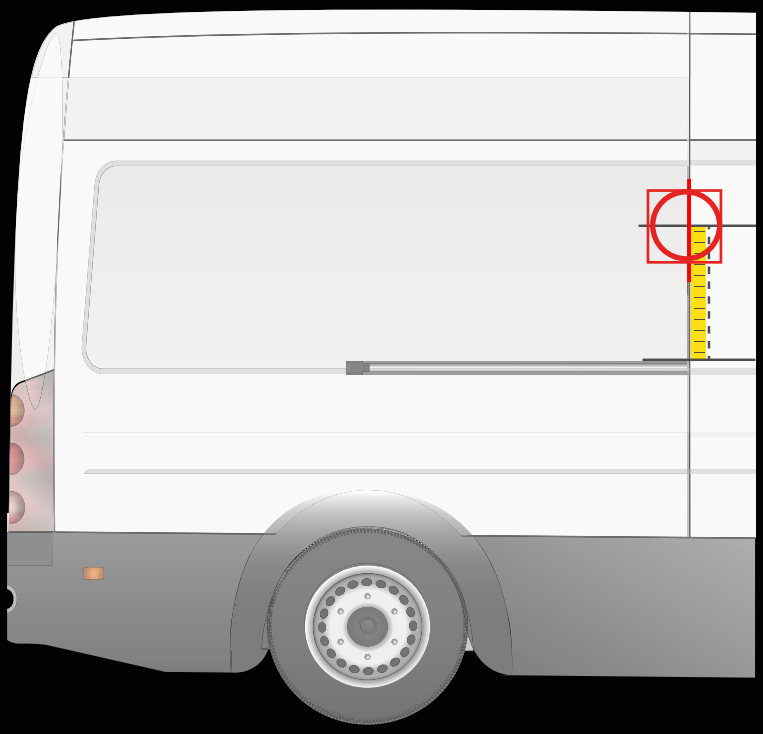

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**30 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


SATURN GO

HYUNDAI

HYUNDAI H350
> 2016




INSTALLATION ON THE REAR DOOR

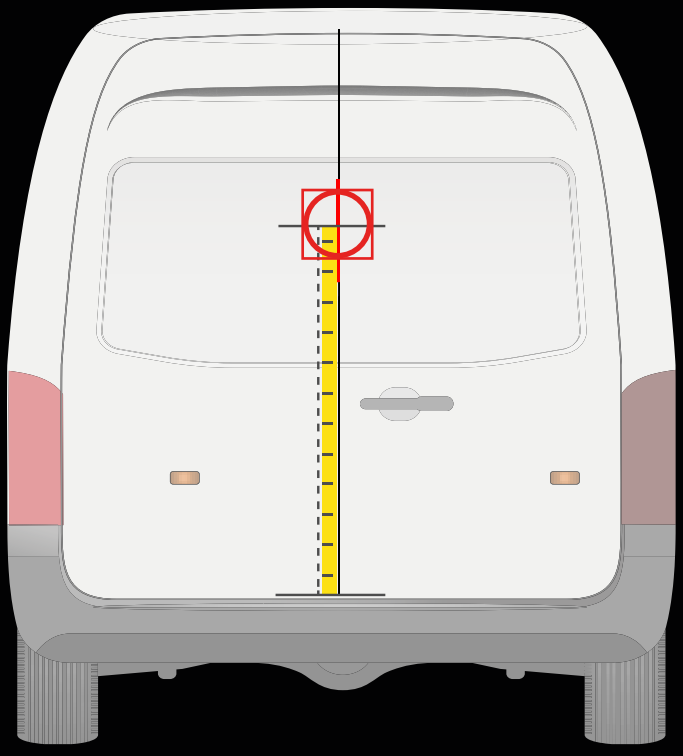

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**101 cm**

INSTALLATION ON THE LATERAL DOOR

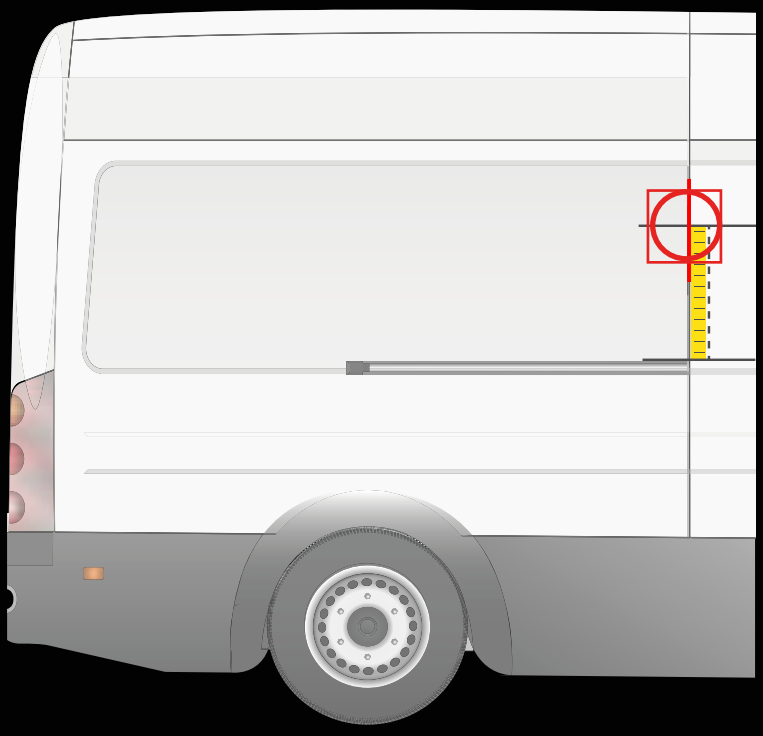

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**25 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


SATURN GO

IVECO DAILY
> 2015

IVECO




INSTALLATION ON THE REAR DOOR

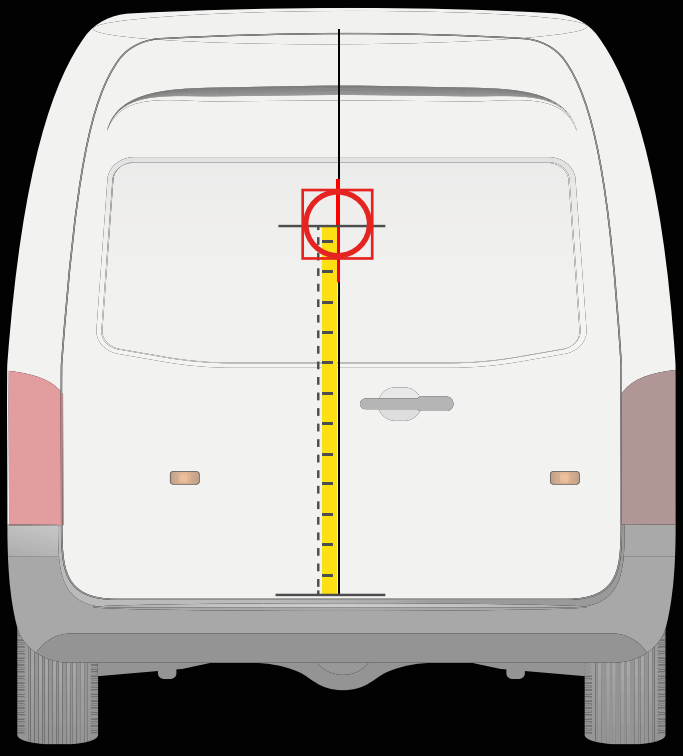

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**80 cm**

INSTALLATION ON THE LATERAL DOOR

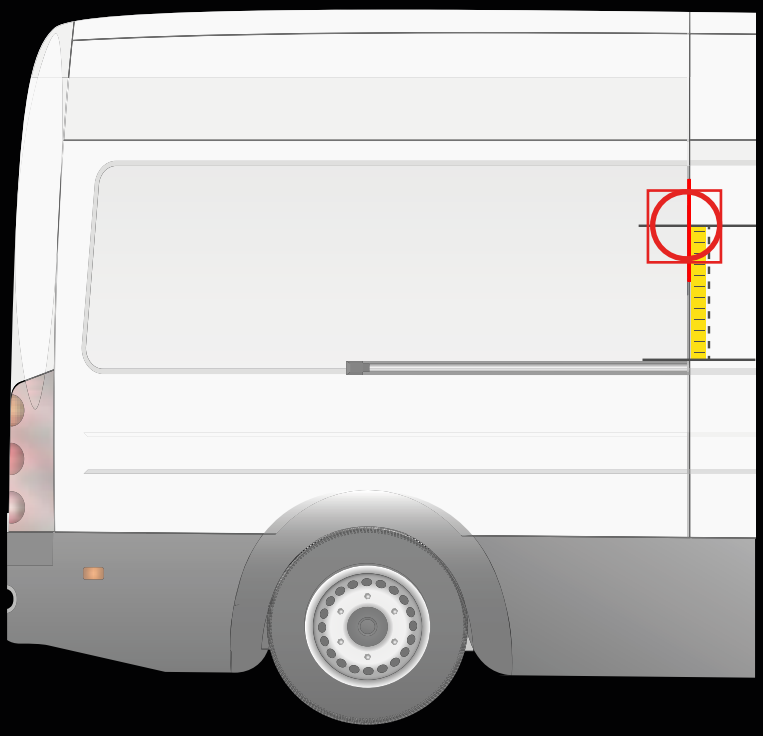

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**20 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


SATURN GO

MAN

MAN TGE
> 2017




INSTALLATION ON THE REAR DOOR

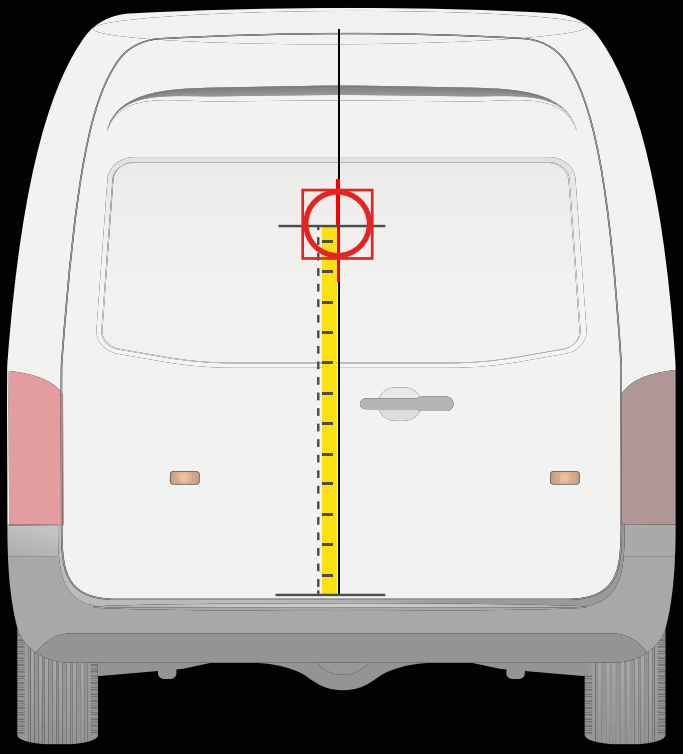

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**140 cm**

INSTALLATION ON THE LATERAL DOOR

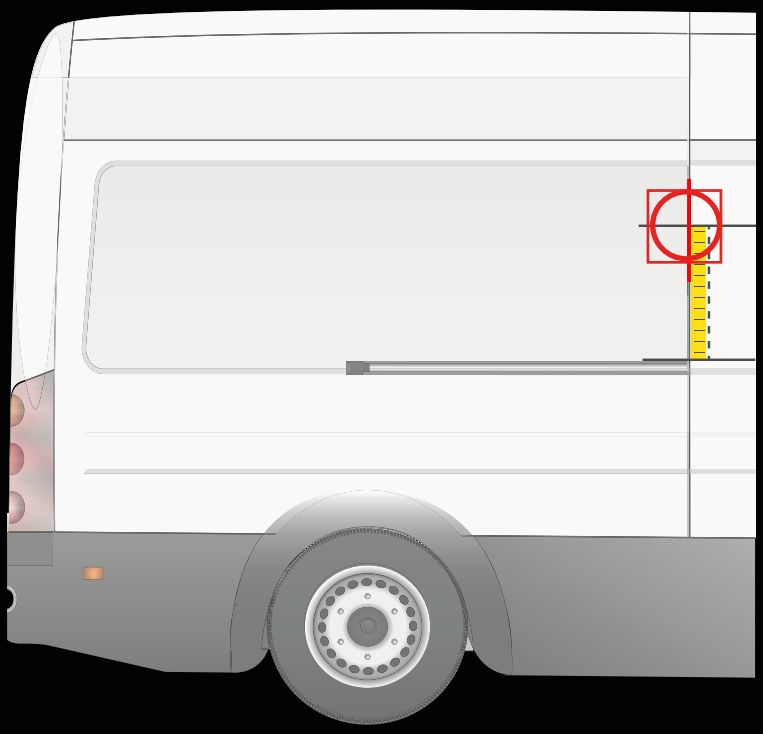

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**20 cm**


The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.

MAXUS

MAXUS EDELIVER 3 > 2018




INSTALLATION ON THE REAR DOOR

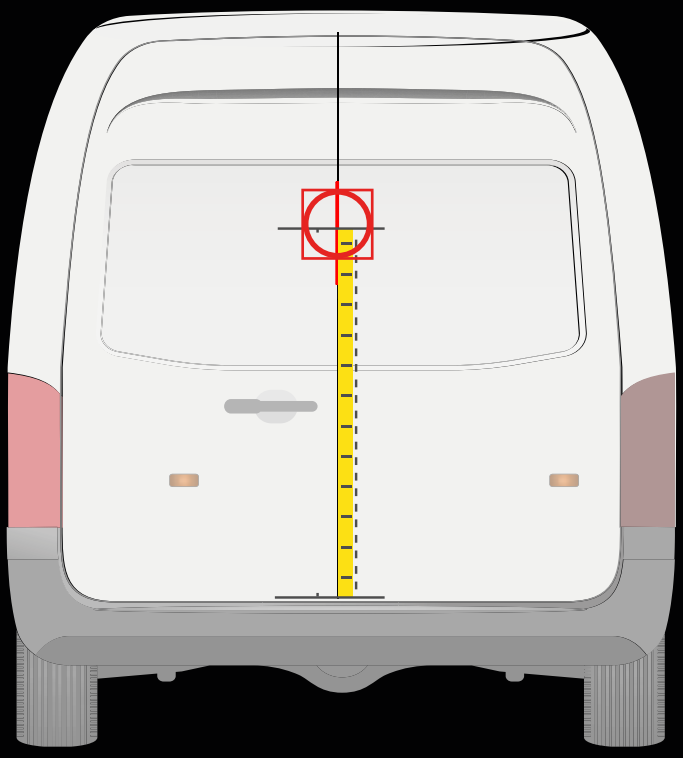

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**83 cm**

INSTALLATION ON THE LATERAL DOOR

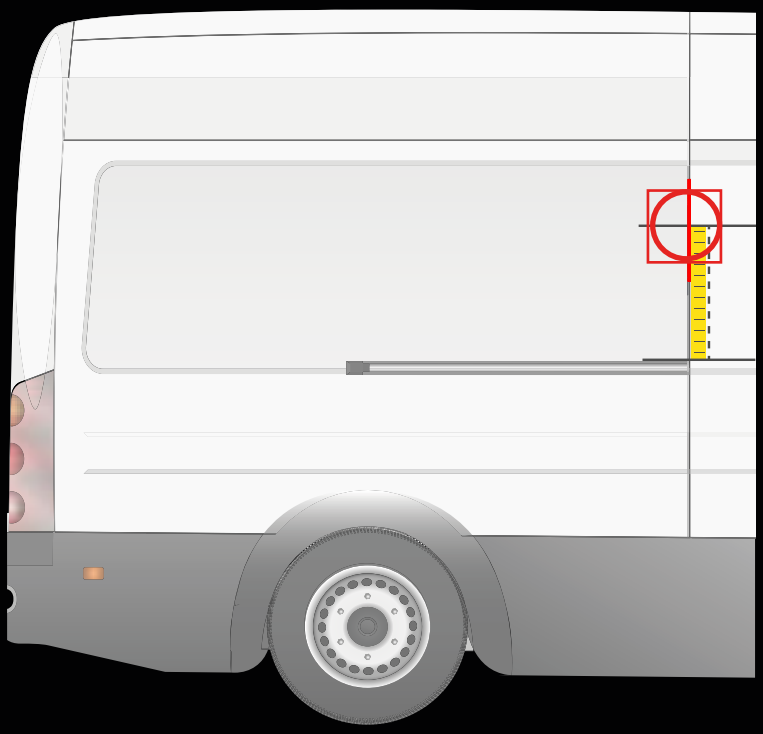

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**27 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


SATURN GO

MAXUS

MAXUS EDELIVER 9 > 2019




INSTALLATION ON THE REAR DOOR

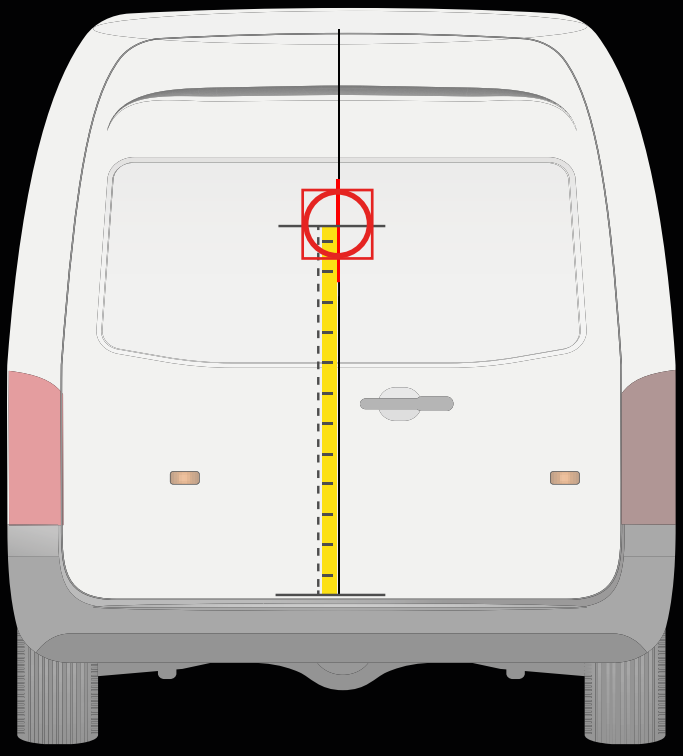

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**110 cm**

INSTALLATION ON THE LATERAL DOOR

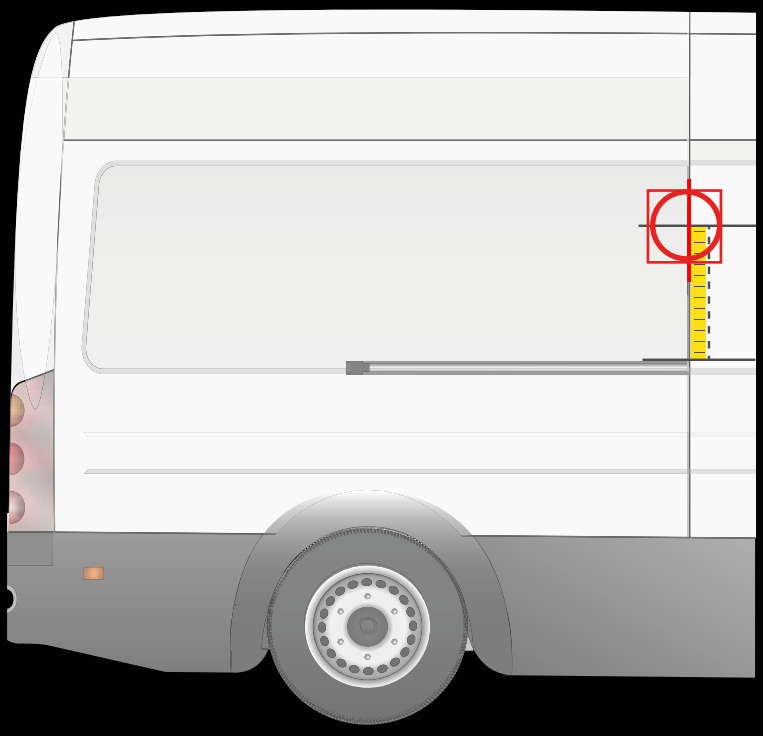

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**18 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


SATURN GO

Mercedes-Benz

MERCEDES CITAN <= 2021




INSTALLATION ON THE REAR DOOR

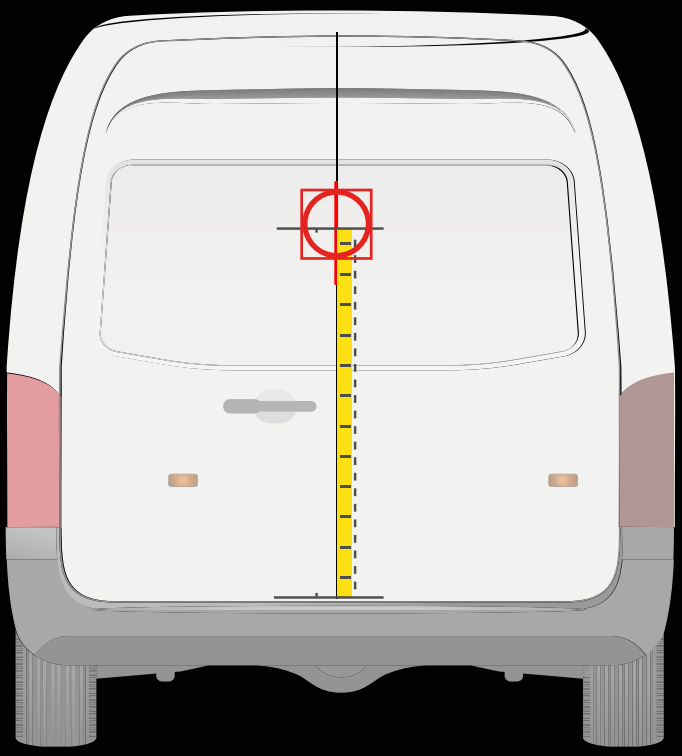

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**75 cm**

INSTALLATION ON THE LATERAL DOOR

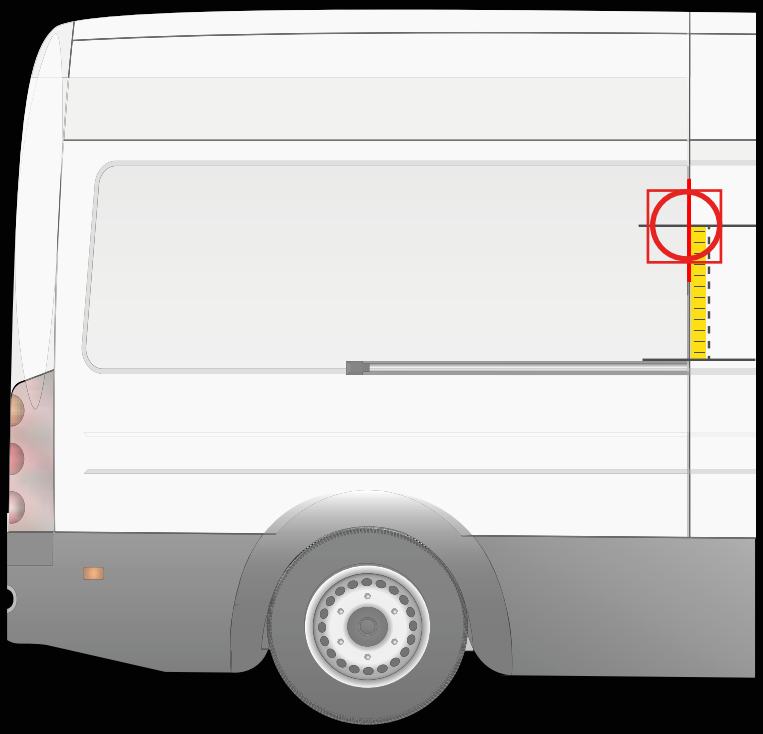

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**24 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.

For the "**Short**" version of the van we recommend using additional fixing plates. Reference **89530030.**


SATURN GO

Mercedes-Benz

MERCEDES CITAN > 2021




INSTALLATION ON THE REAR DOOR

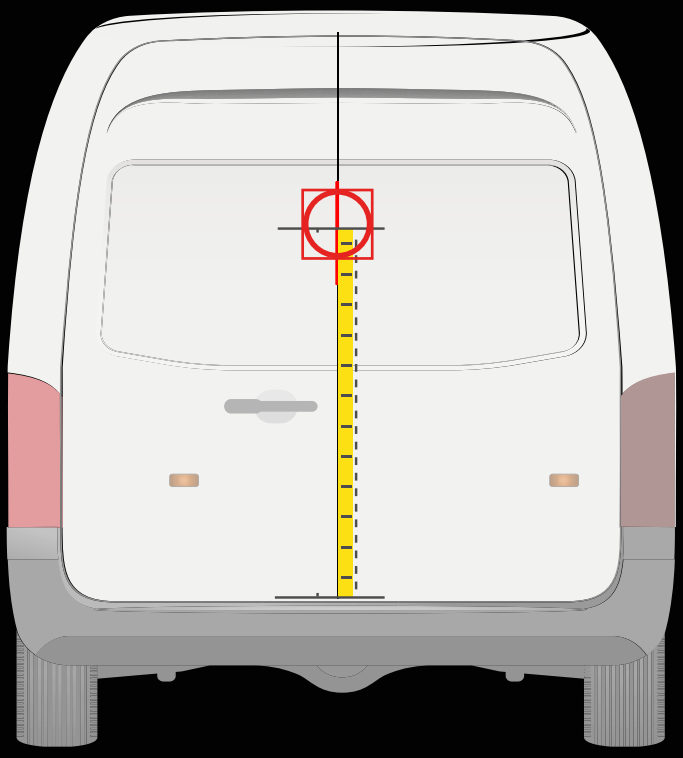

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**75 cm**

INSTALLATION ON THE LATERAL DOOR

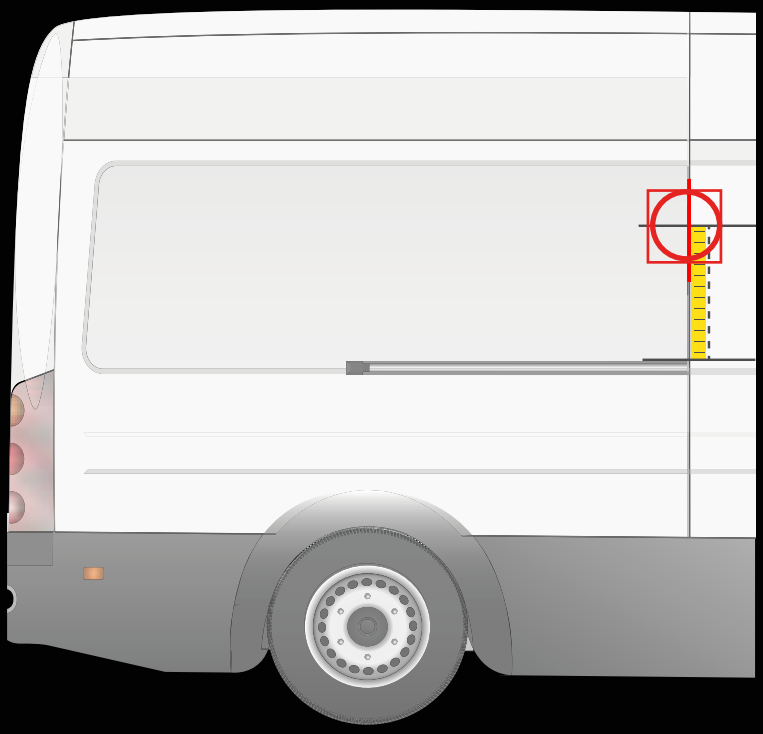

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**24 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


SATURN GO

Mercedes-Benz

MERCEDES VITO > 2014




INSTALLATION ON THE REAR DOOR

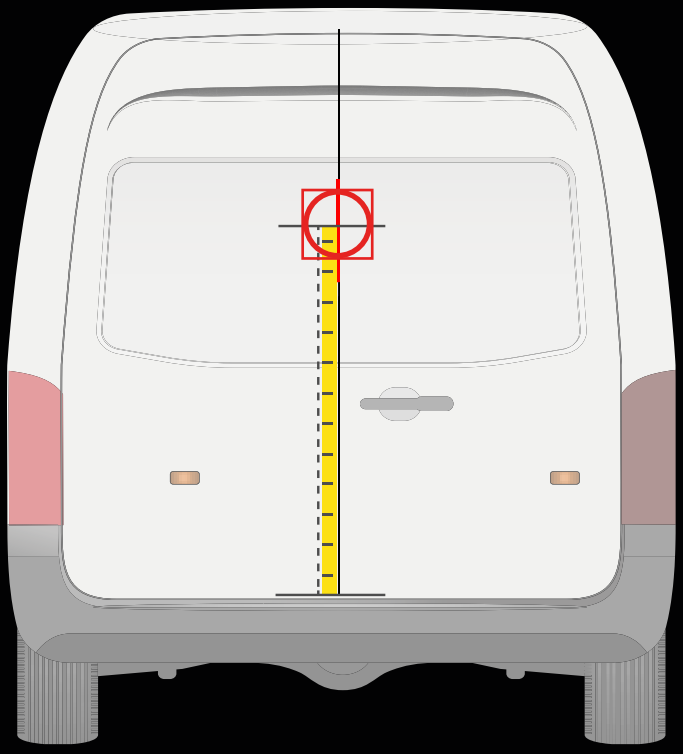

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**90 cm**

INSTALLATION ON THE LATERAL DOOR

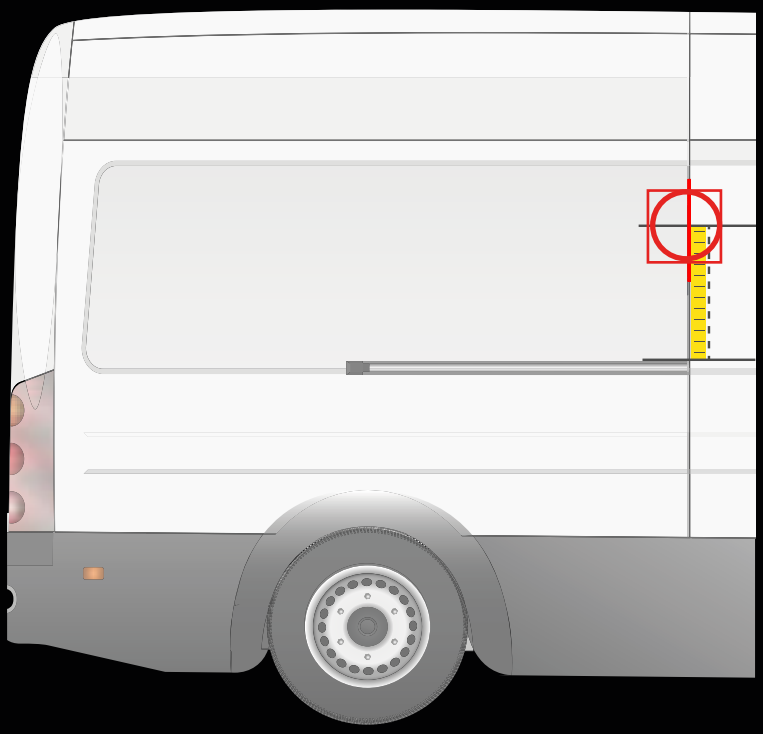

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**35 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


SATURN GO

Mercedes-Benz

MERCEDES SPRINTER > 2018




INSTALLATION ON THE REAR DOOR

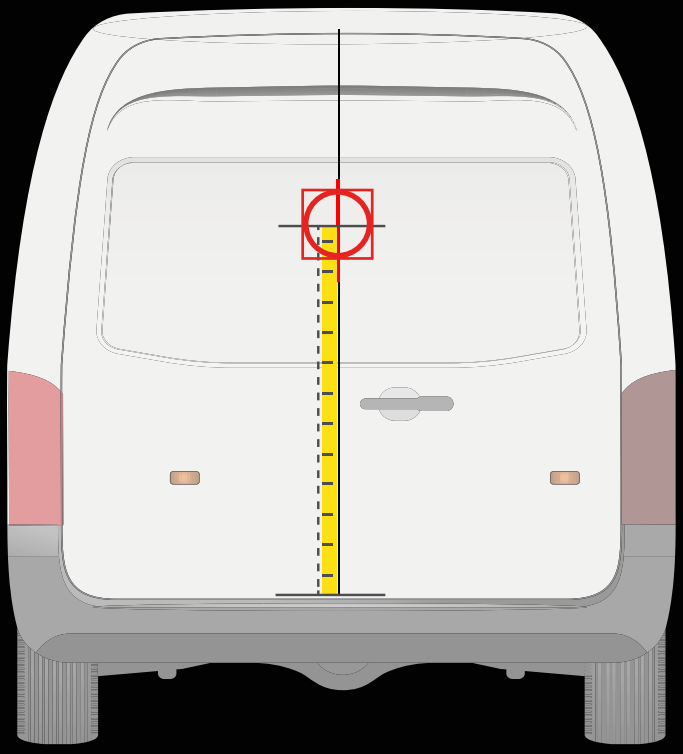

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**110 cm**

INSTALLATION ON THE LATERAL DOOR

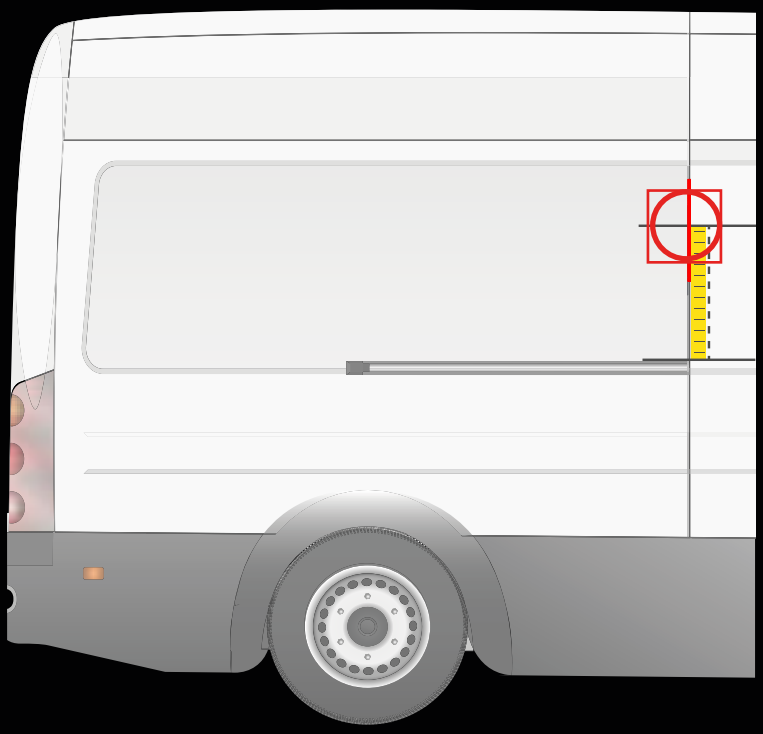

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**20 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


SATURN GO

NISSAN

NISSAN E-NV 200
2014 - 2021




INSTALLATION ON THE REAR DOOR

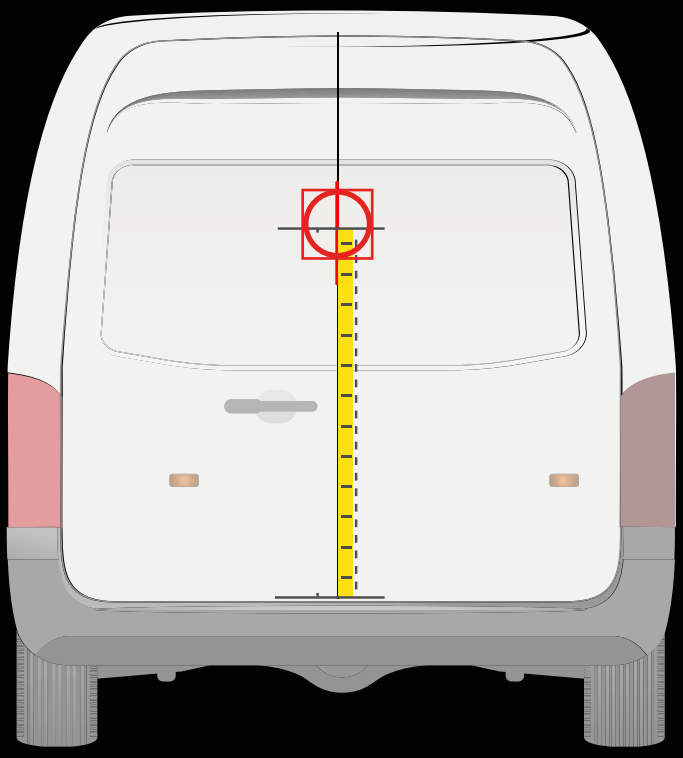

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**93 cm**

INSTALLATION ON THE LATERAL DOOR

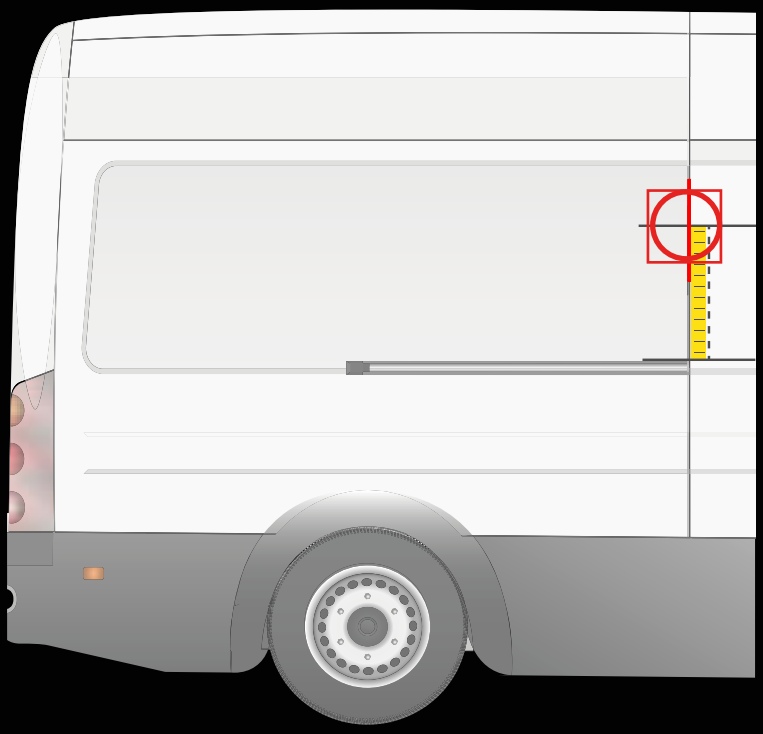

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**49 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


SATURN GO

NISSAN

NISSAN NV 250
2019 - 2021




INSTALLATION ON THE REAR DOOR

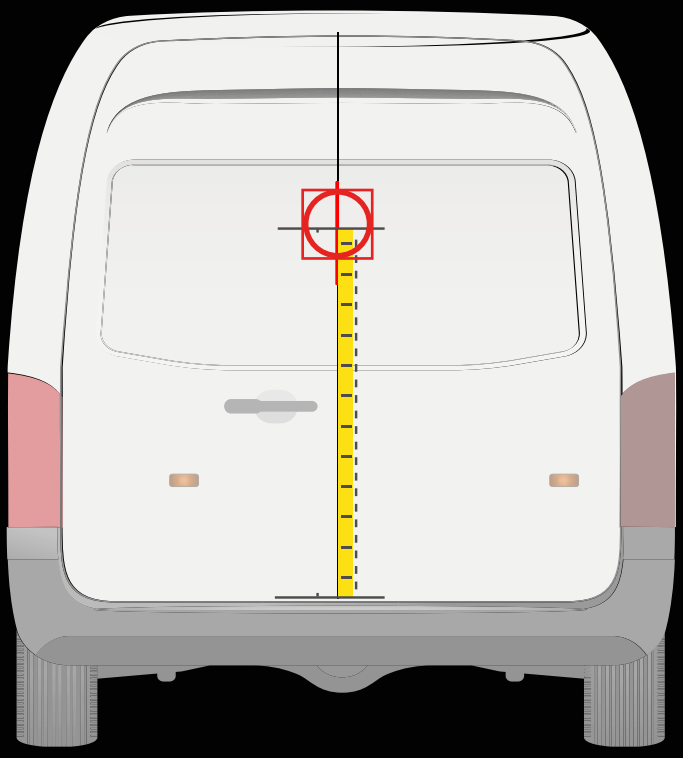

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**72 cm**

INSTALLATION ON THE LATERAL DOOR

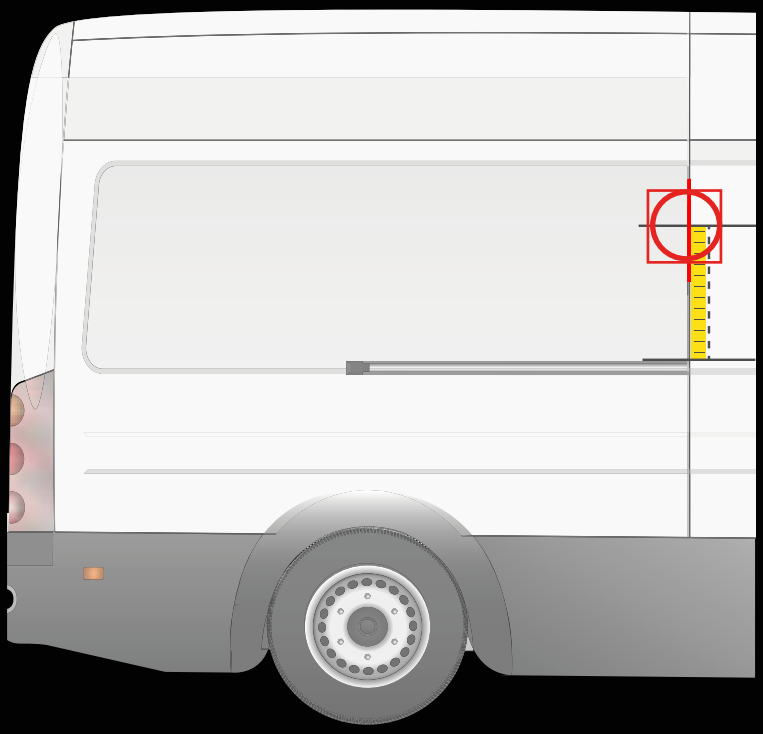

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**22,5 cm**

The above height recommendations are a guide, other mounting heights are possible.
Choose a flat area on the door that does not cause interference.

For the "**Short**" version of the van we recommend using additional fixing plates. Reference **89530030.**


SATURN GO

NISSAN

NISSAN TOWNSTAR VAN
> 2021




INSTALLATION ON THE REAR DOOR

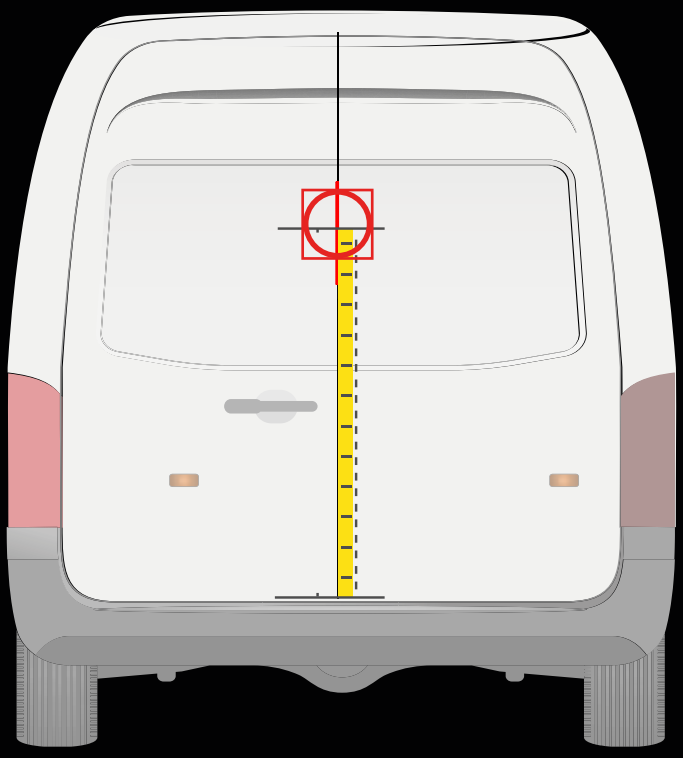

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**75 cm**

INSTALLATION ON THE LATERAL DOOR

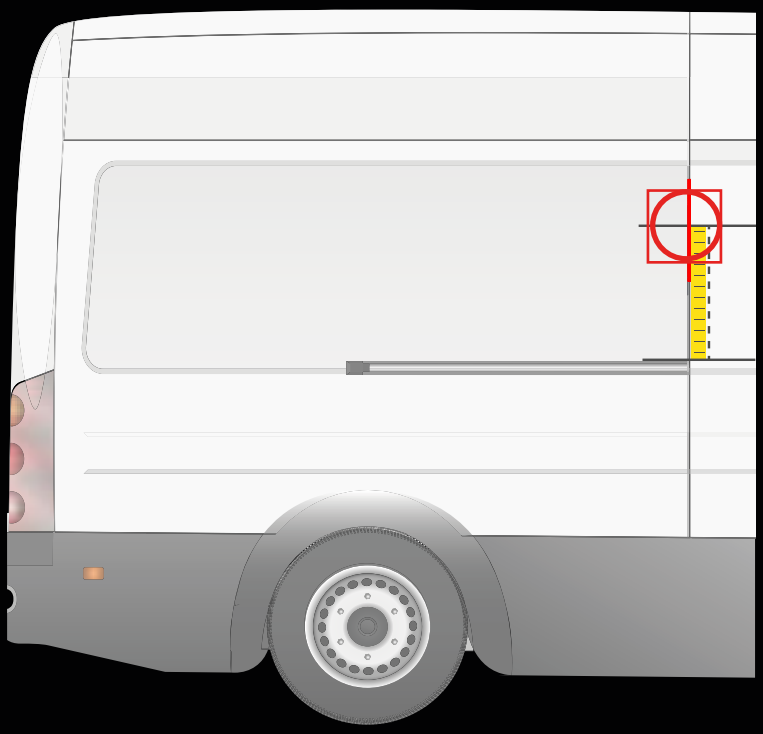

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**24 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


SATURN GO

NISSAN

NISSAN PRIMASTAR > 2022




INSTALLATION ON THE REAR DOOR

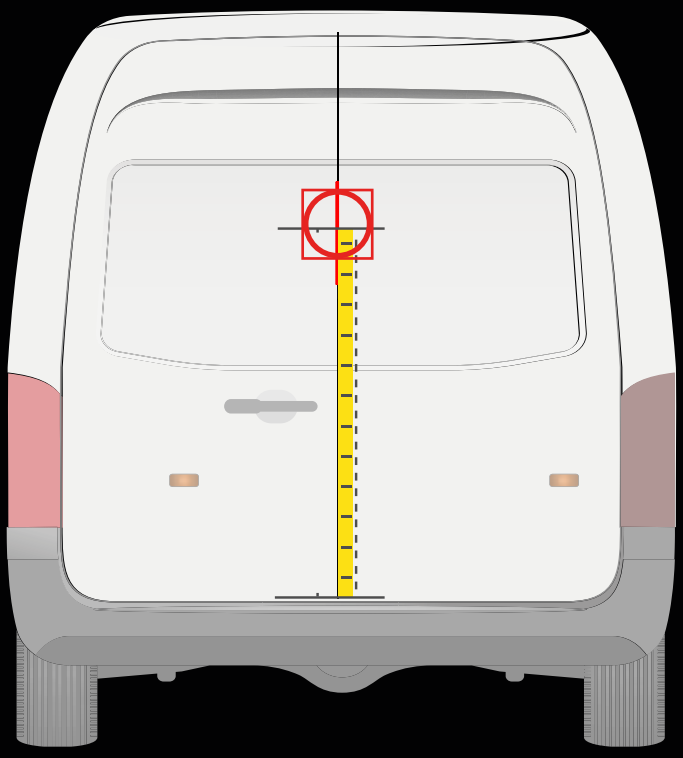

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**84 cm**

INSTALLATION ON THE LATERAL DOOR

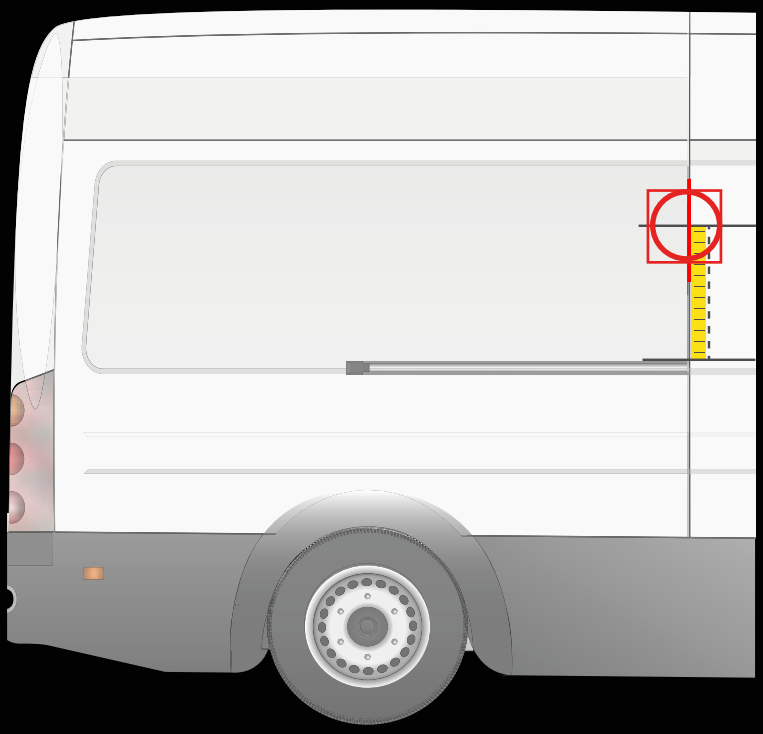

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**30 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


SATURN GO

NISSAN

NISSAN INTERSTAR > 2022




INSTALLATION ON THE REAR DOOR

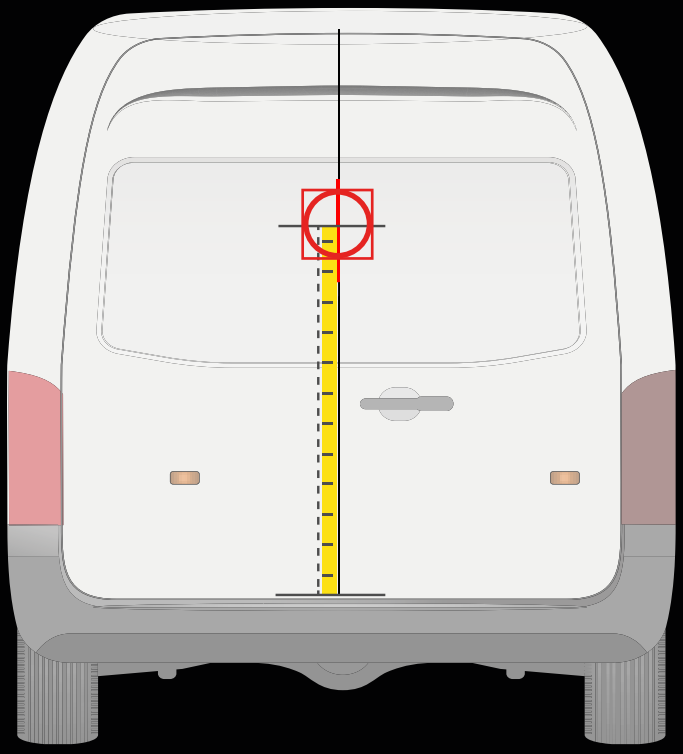

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**110 cm**

INSTALLATION ON THE LATERAL DOOR

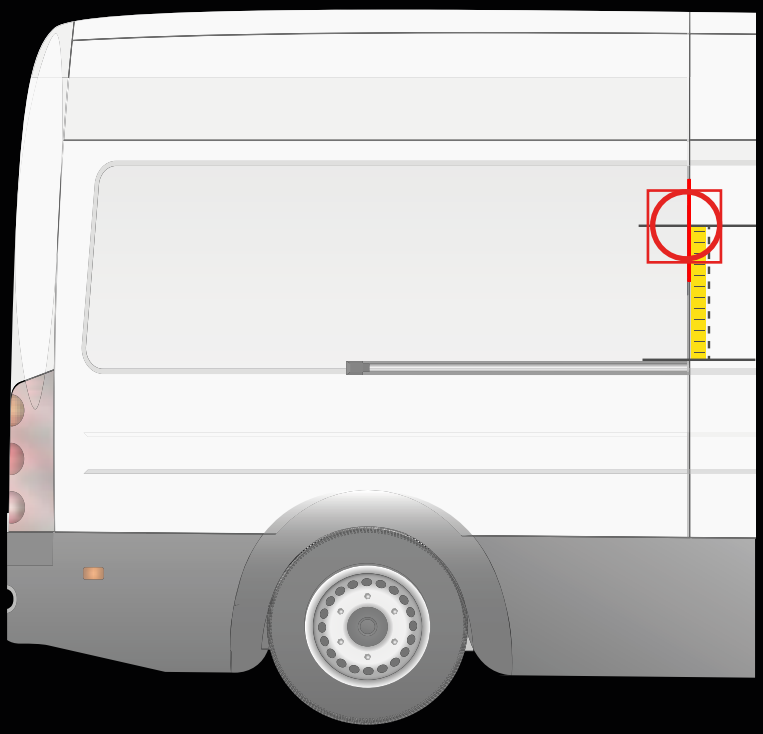

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**20 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


SATURN GO

OPEL

OPEL COMBO > 2018




INSTALLATION ON THE REAR DOOR

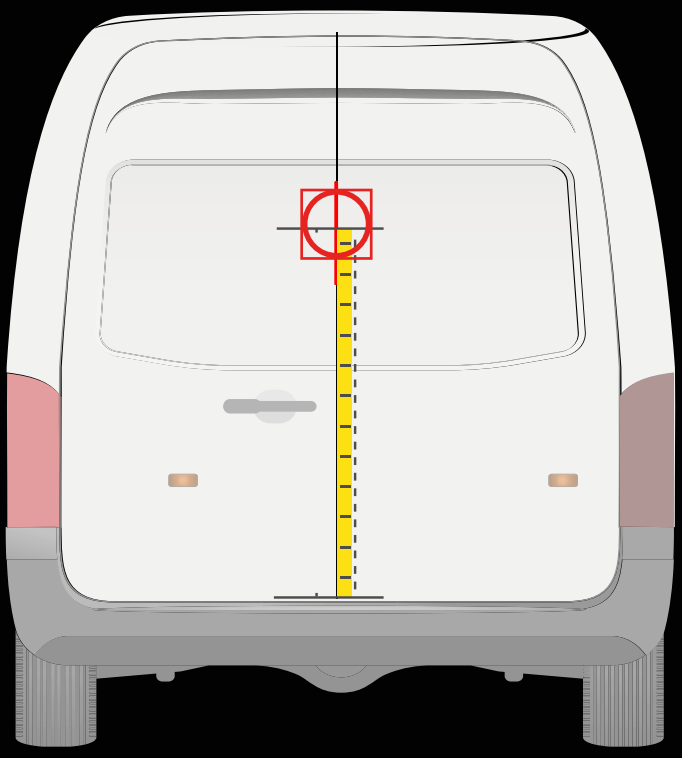

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**80 cm**

INSTALLATION ON THE LATERAL DOOR

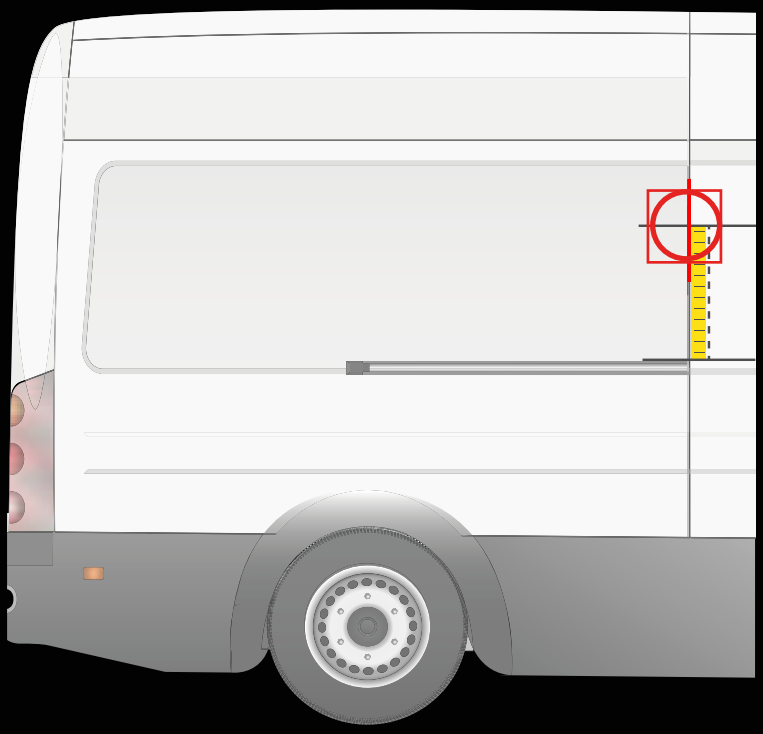

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**25 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


SATURN GO

OPEL

OPEL VIVARO B
2014 - 2019




INSTALLATION ON THE REAR DOOR

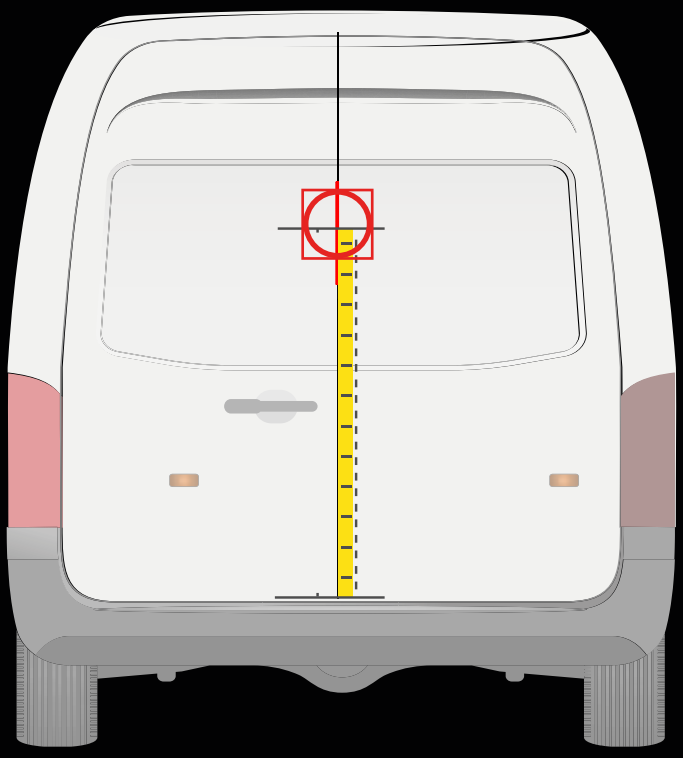

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**95 cm**

INSTALLATION ON THE LATERAL DOOR

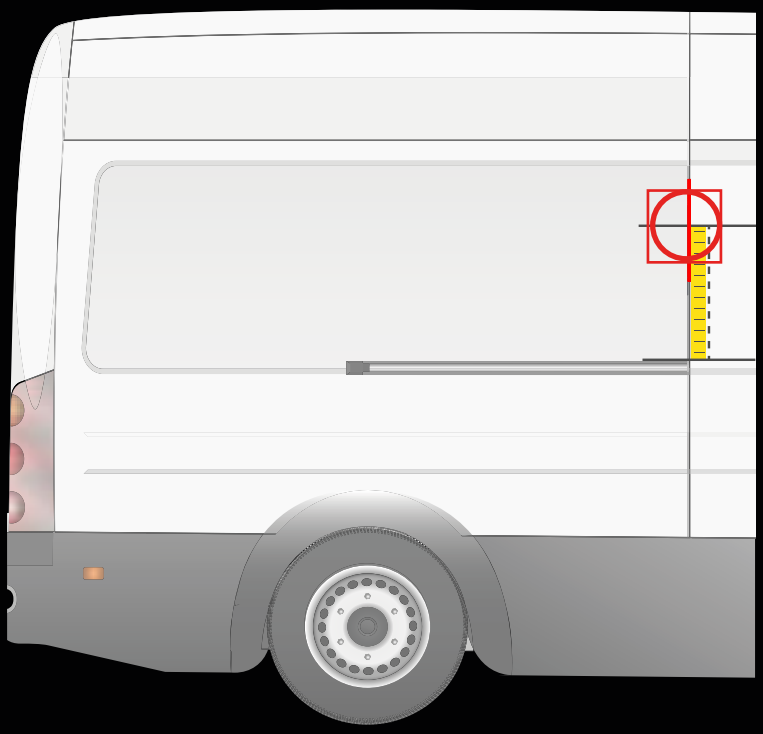

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**30 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


SATURN GO

OPEL

OPEL VIVARO C > 2019




INSTALLATION ON THE REAR DOOR

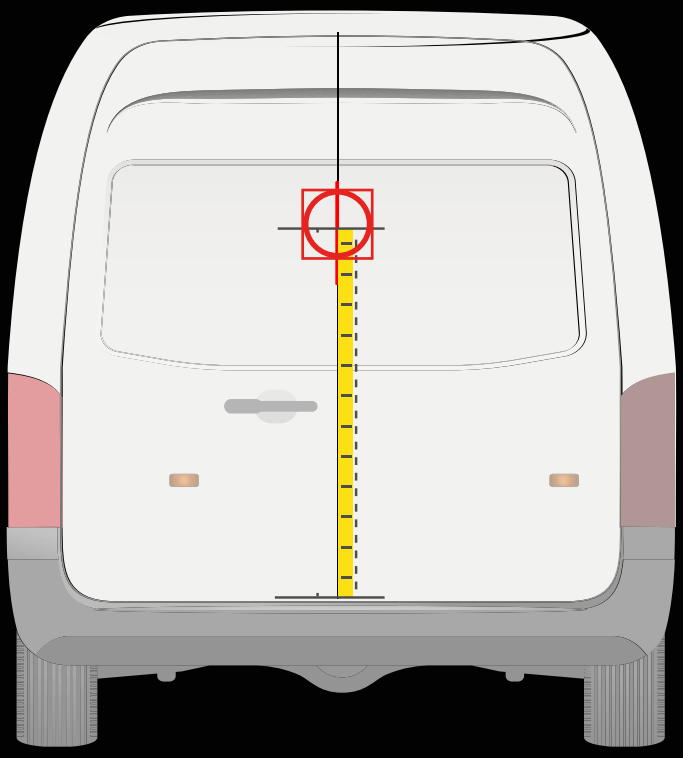

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**95 cm**

INSTALLATION ON THE LATERAL DOOR

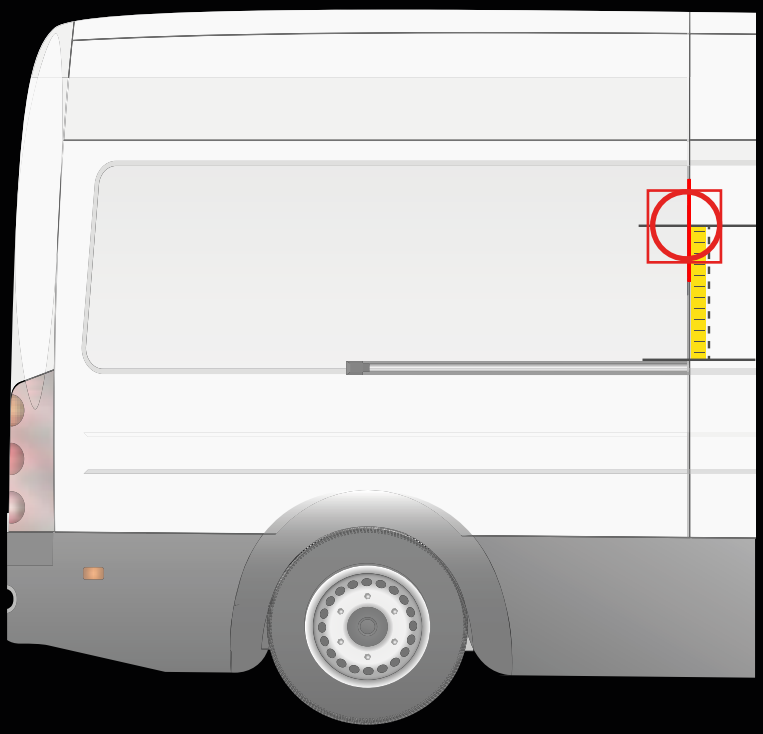

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**30 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


SATURN GO

OPEL

OPEL MOVANO
> 2022




INSTALLATION ON THE REAR DOOR

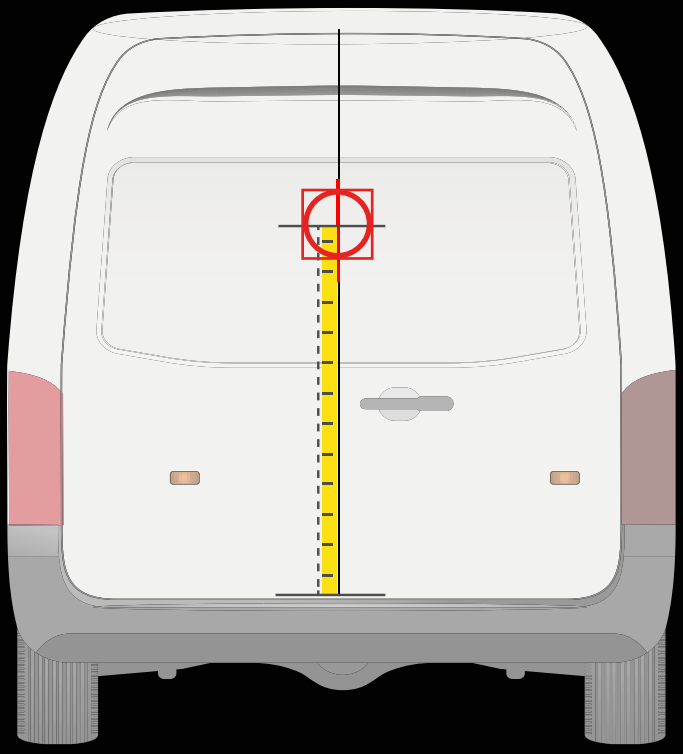

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**112 cm**

INSTALLATION ON THE LATERAL DOOR

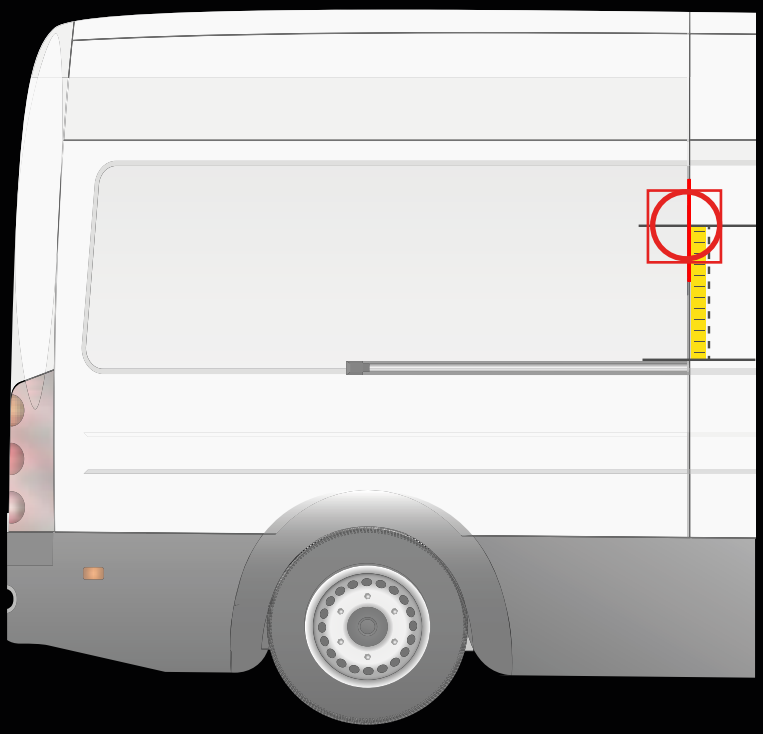

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**20 cm**


The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.

SATURN GO

PEUGEOT BIPPER
2007 - 2016




INSTALLATION ON THE REAR DOOR

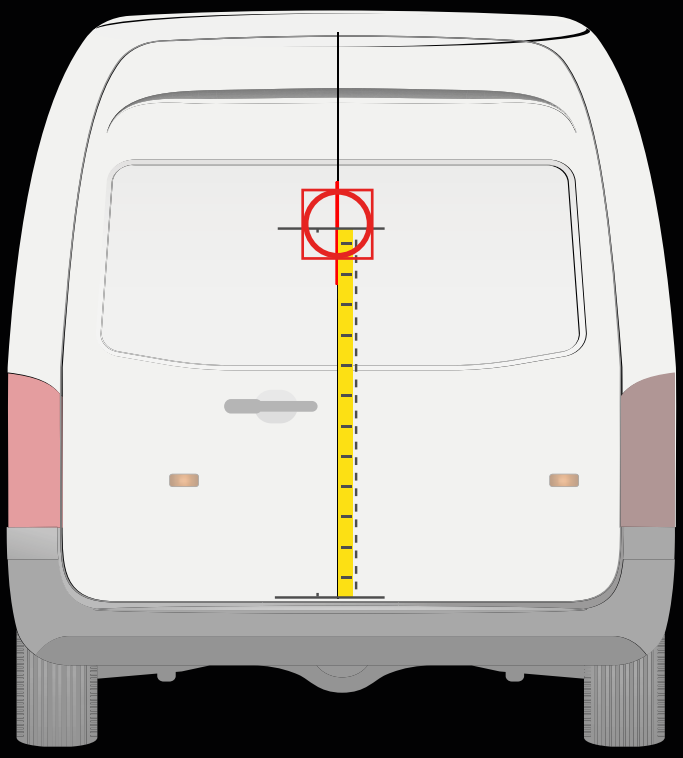

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**80 cm**

INSTALLATION ON THE LATERAL DOOR

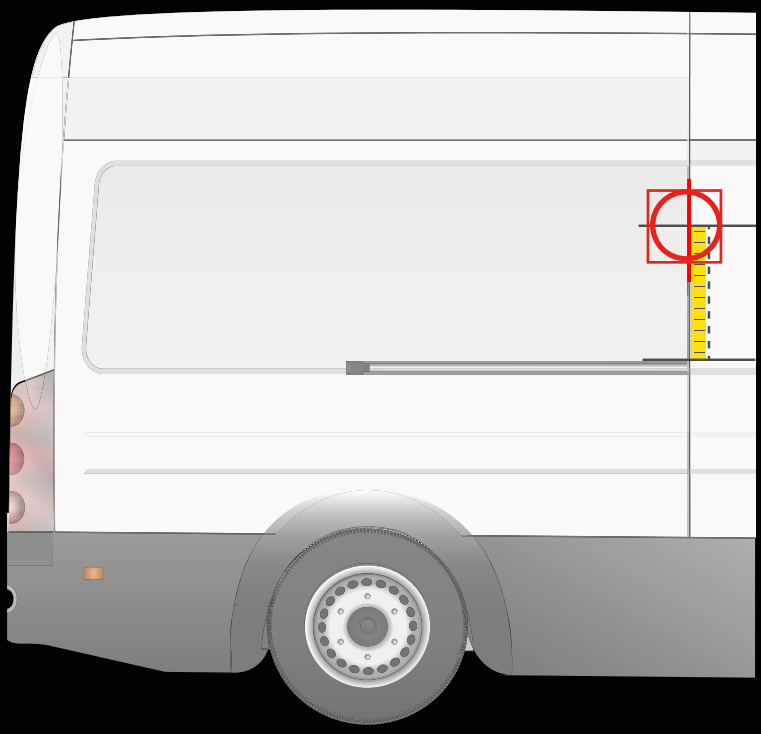

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**20 cm**


The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.

SATURN GO

PEUGEOT PARTNER > 2018




INSTALLATION ON THE REAR DOOR

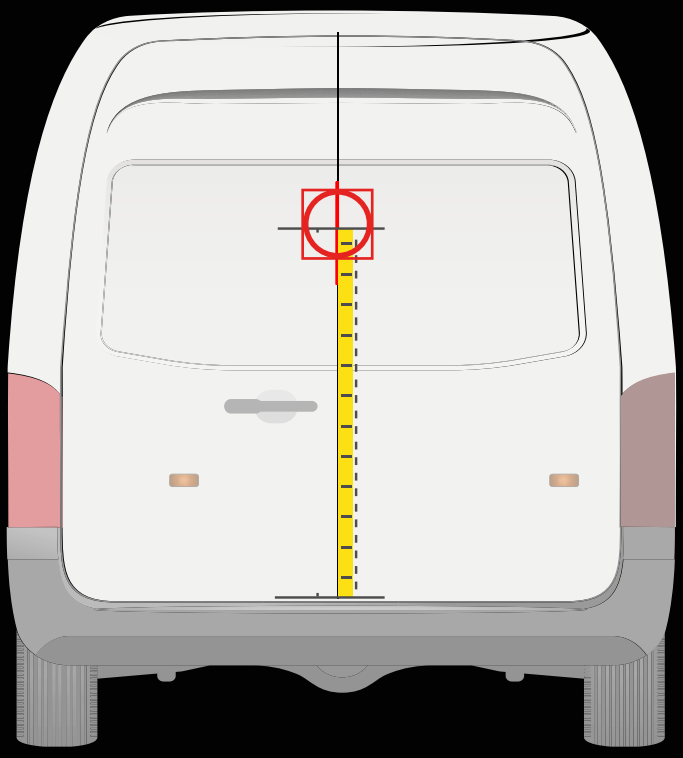

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**80 cm**

INSTALLATION ON THE LATERAL DOOR

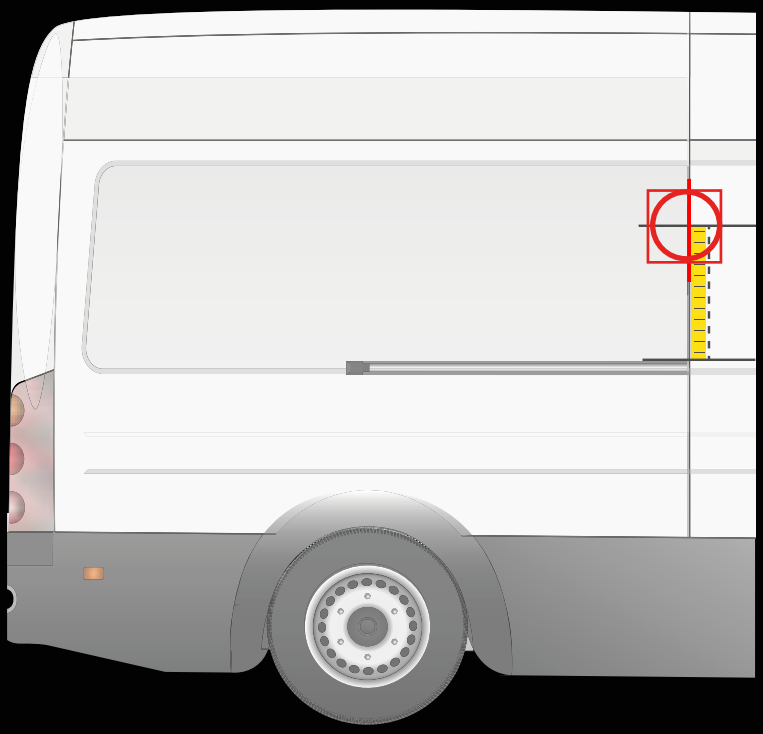

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**25 cm**


The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.

SATURN GO

PEUGEOT EXPERT > 2016




INSTALLATION ON THE REAR DOOR

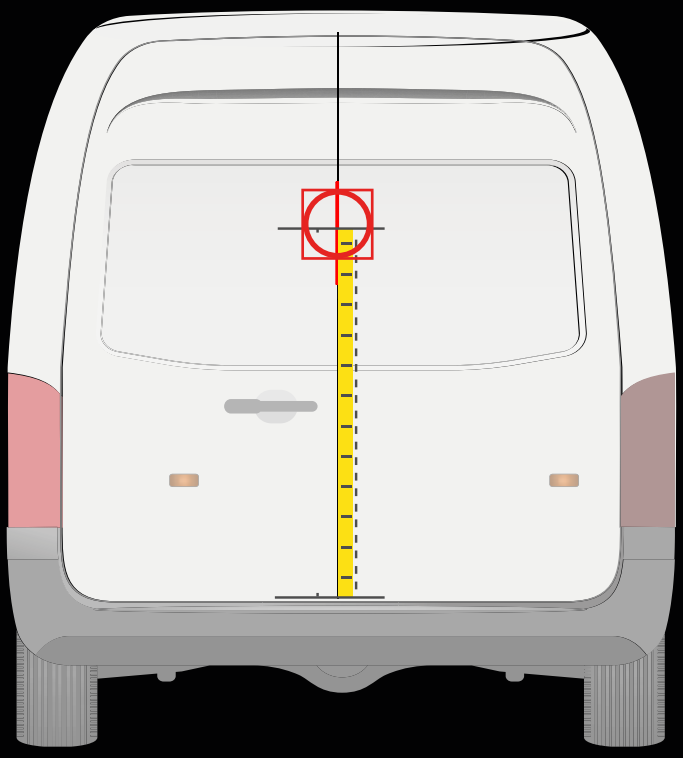

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**95 cm**

INSTALLATION ON THE LATERAL DOOR

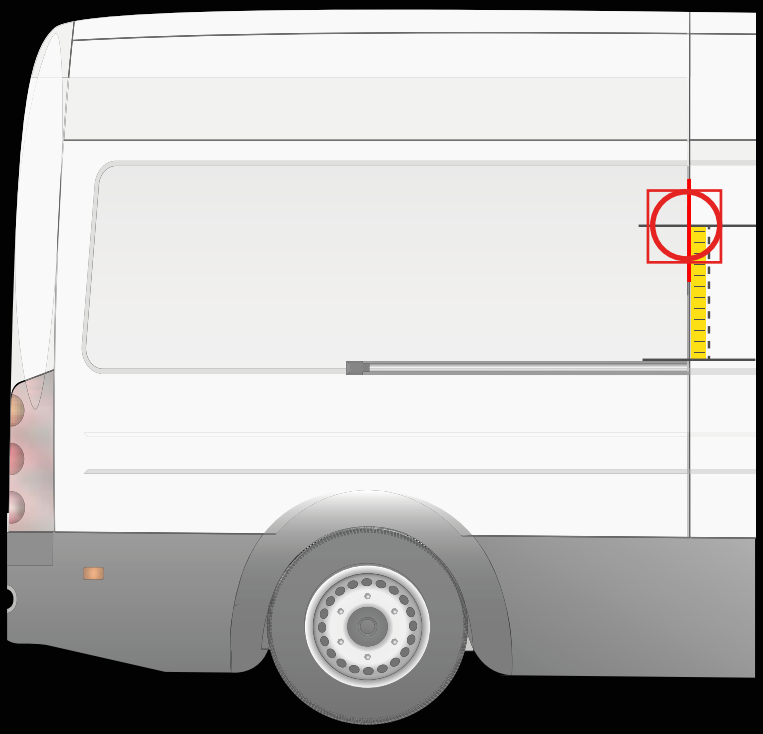

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**30 cm**


The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.

SATURN GO

PEUGEOT BOXER > 2014




INSTALLATION ON THE REAR DOOR

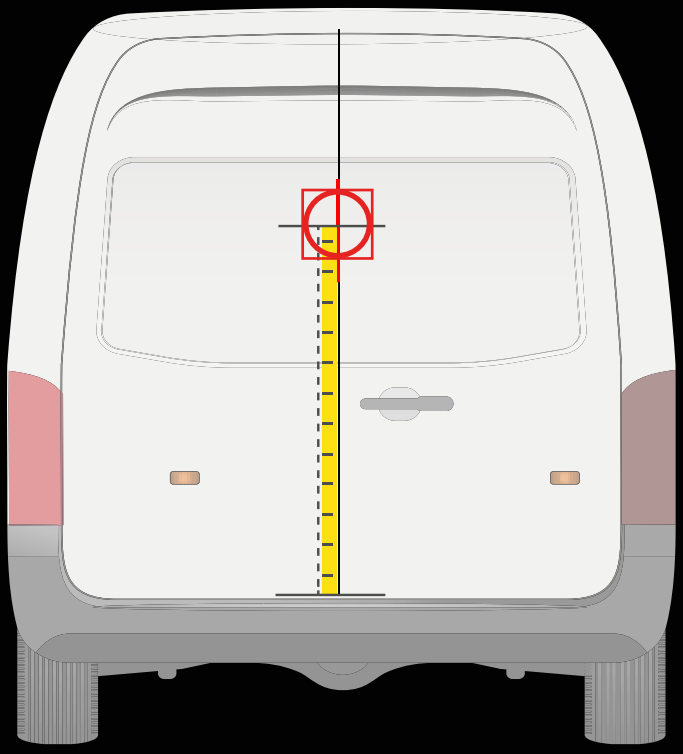

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**112 cm**

INSTALLATION ON THE LATERAL DOOR

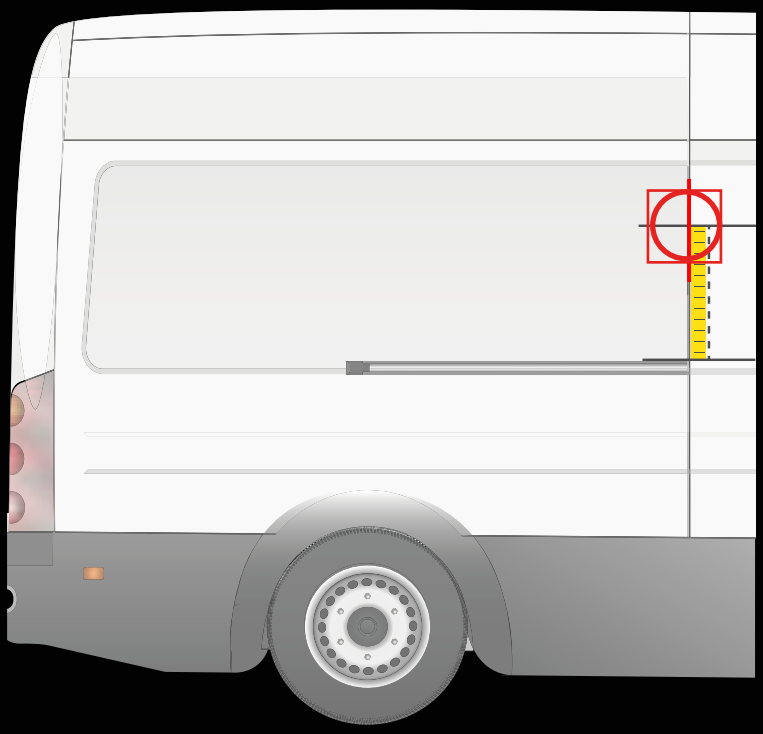

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**20 cm**


The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.

SATURN GO

RENAULT KANGOO
2008 - 2021




INSTALLATION ON THE REAR DOOR

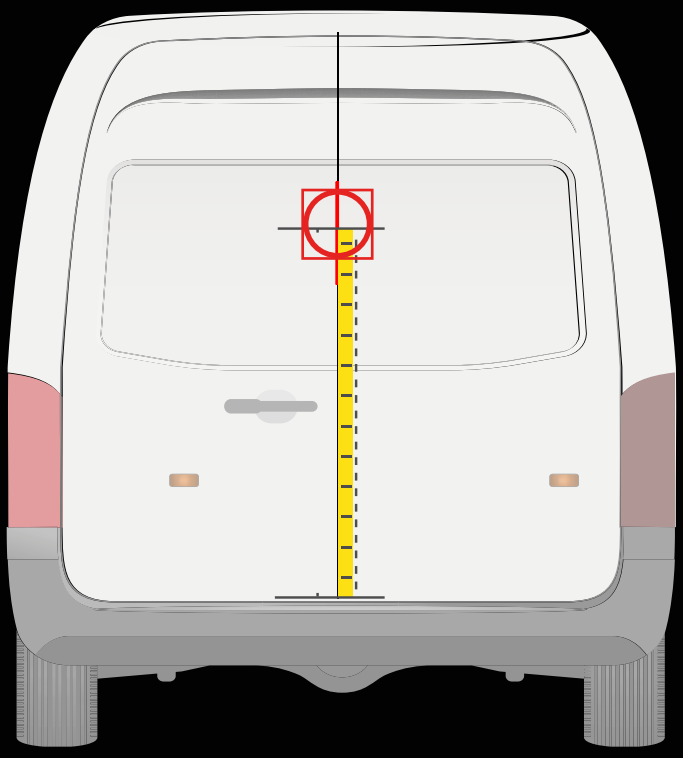

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**72 cm**

INSTALLATION ON THE LATERAL DOOR

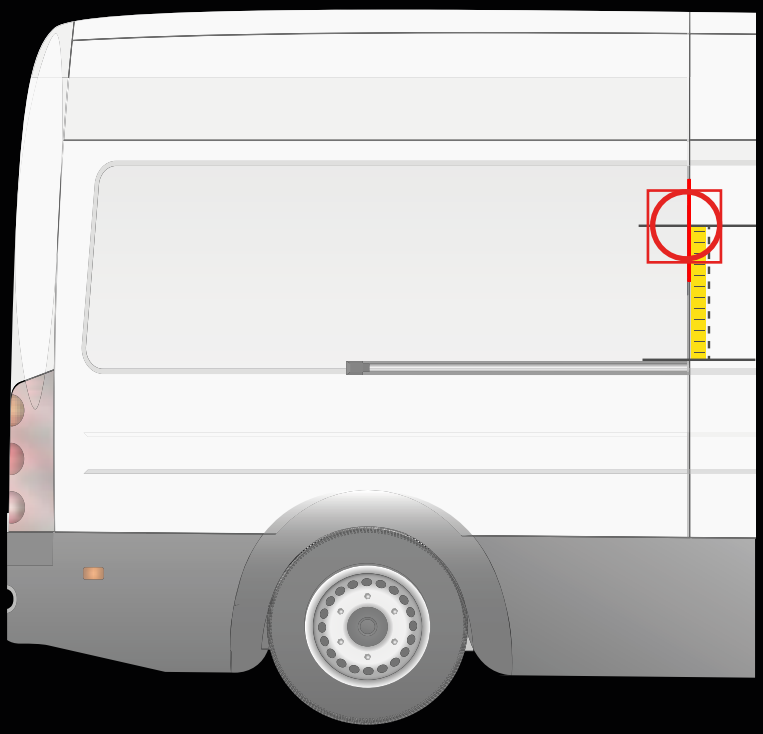

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**22,5 cm**

The above height recommendations are a guide, other mounting heights are possible.
Choose a flat area on the door that does not cause interference.


For the "**Short**" version of the van we recommend using additional fixing plates. Reference **89530030.**

SATURN GO

RENAULT KANGOO VAN > 2021




INSTALLATION ON THE REAR DOOR

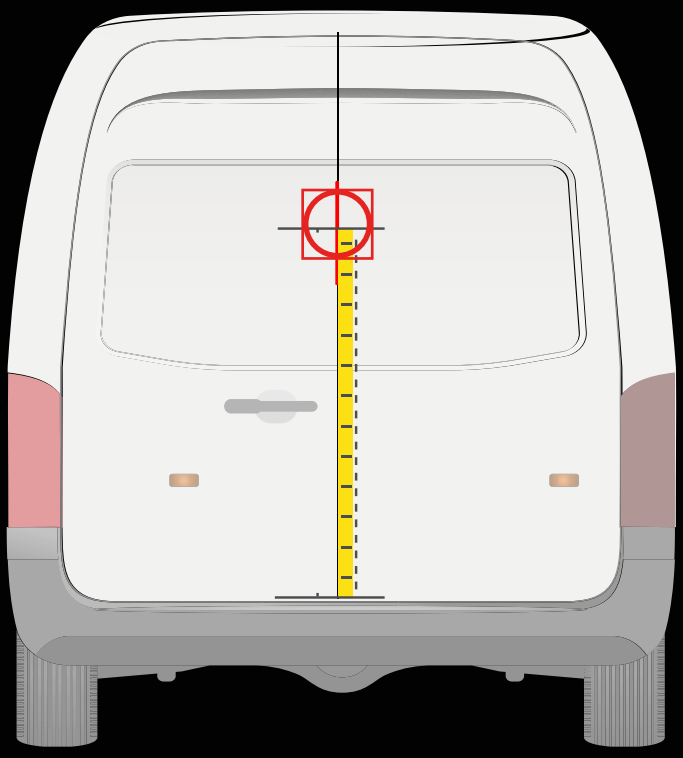

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**75 cm**

INSTALLATION ON THE LATERAL DOOR

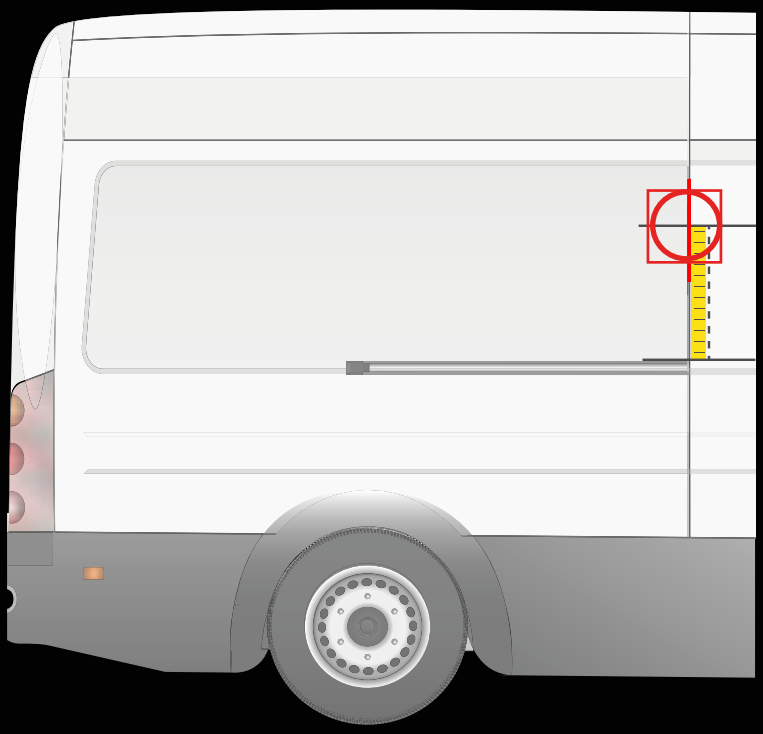

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**24 cm**


The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.

SATURN GO

RENAULT EXPRESS VAN > 2020




INSTALLATION ON THE REAR DOOR

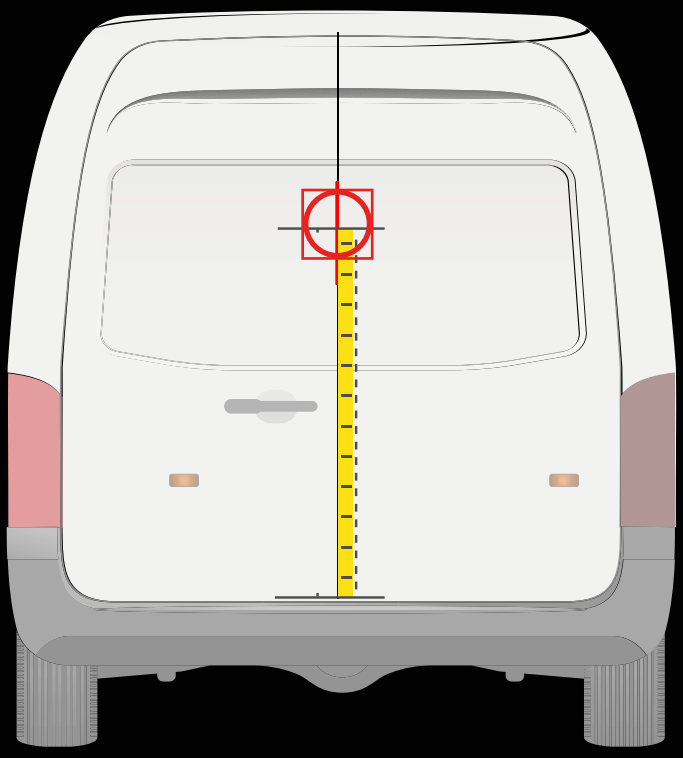

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**80 cm**

INSTALLATION ON THE LATERAL DOOR

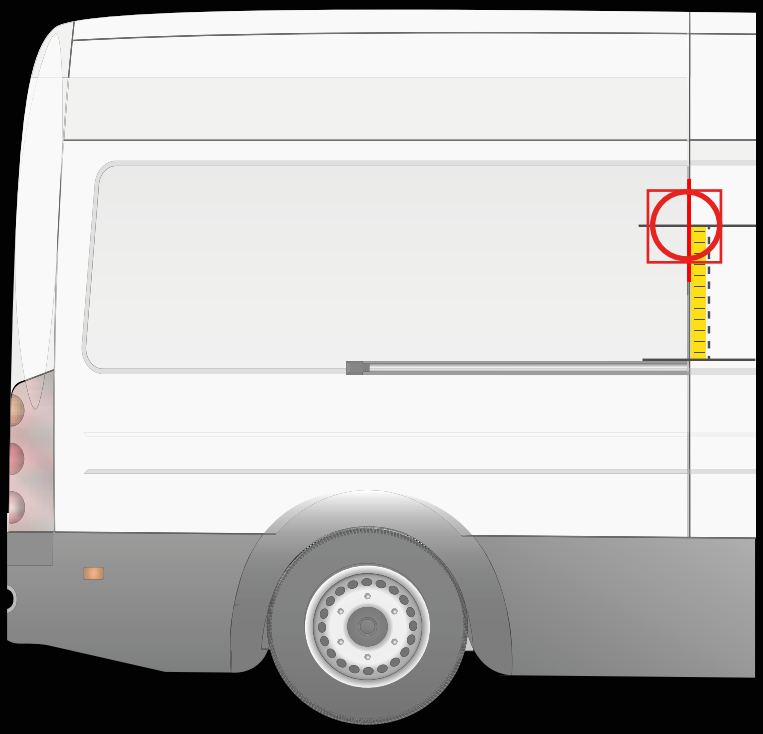

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**20 cm**


The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.

SATURN GO

RENAULT TRAFIC > 2014




INSTALLATION ON THE REAR DOOR

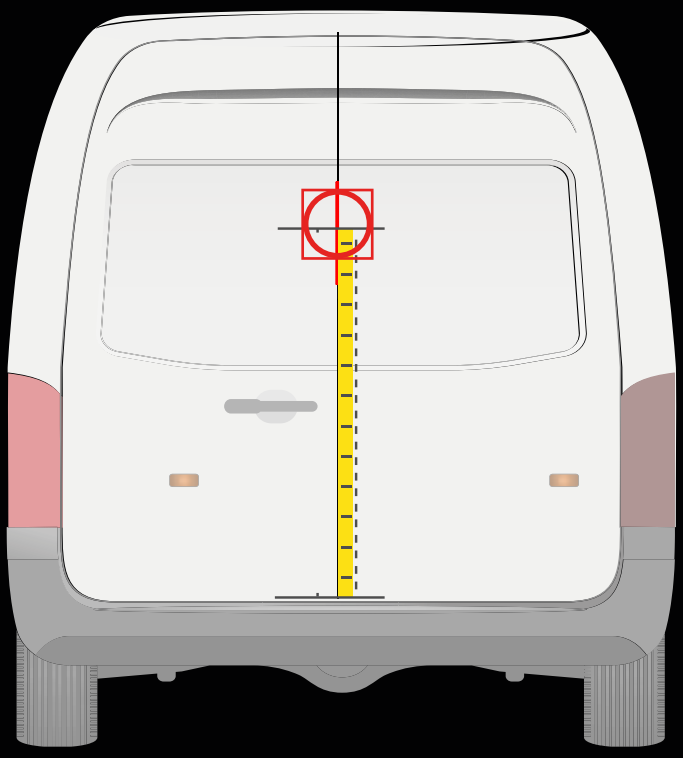

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**84 cm**

INSTALLATION ON THE LATERAL DOOR

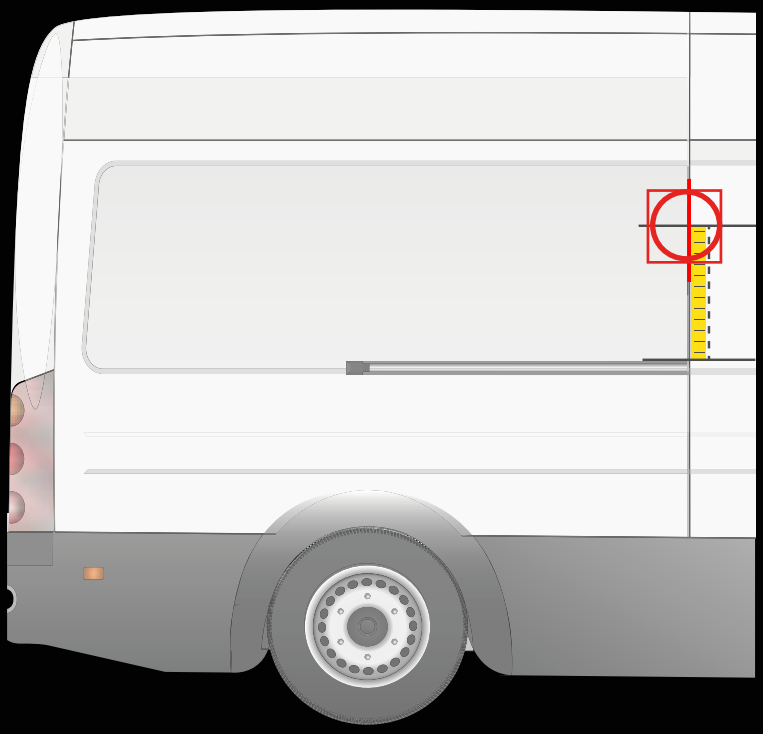

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**30 cm**


The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.

SATURN GO

RENAULT MASTER
2019 - 2023




INSTALLATION ON THE REAR DOOR

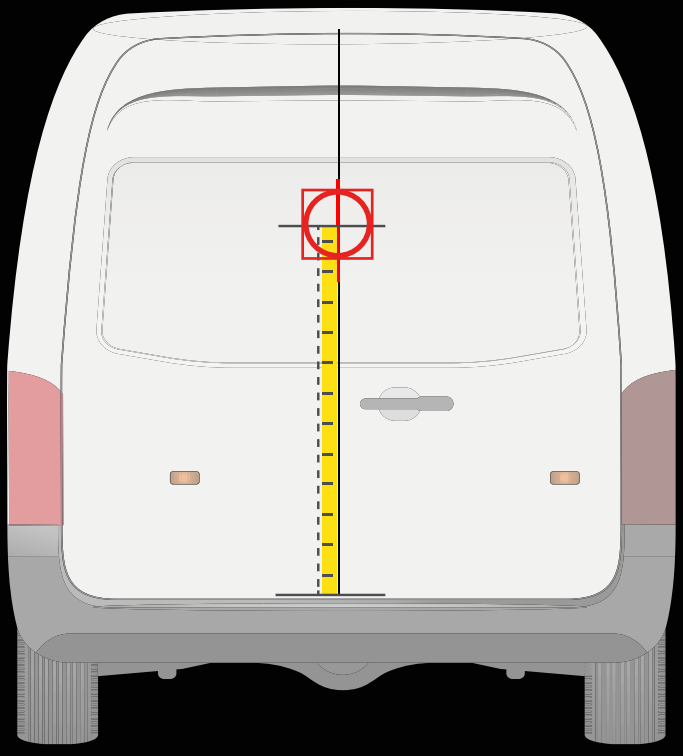

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**110 cm**

INSTALLATION ON THE LATERAL DOOR

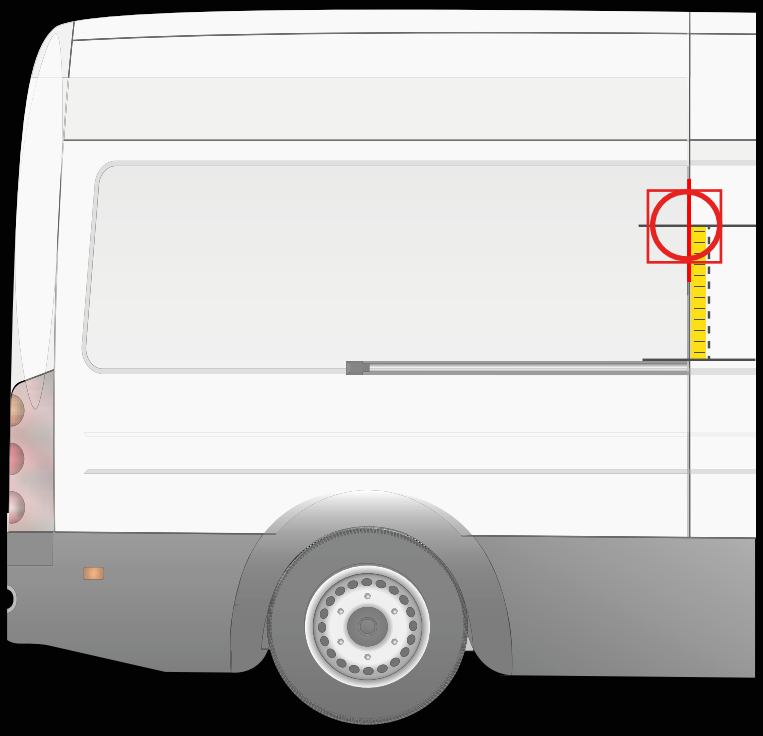

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**20 cm**


The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.

SATURN GO

RENAULT MASTER
> 2024




INSTALLATION ON THE REAR DOOR

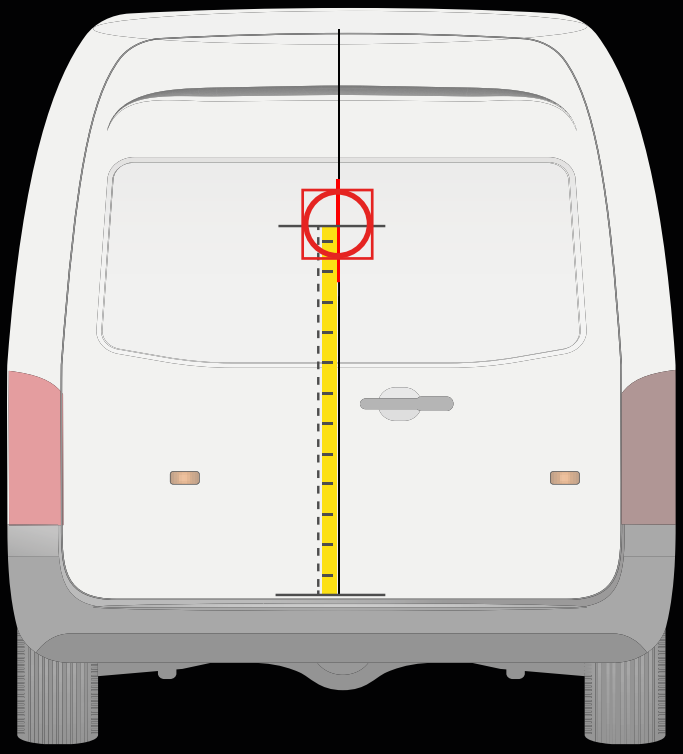

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**120 cm**

INSTALLATION ON THE LATERAL DOOR

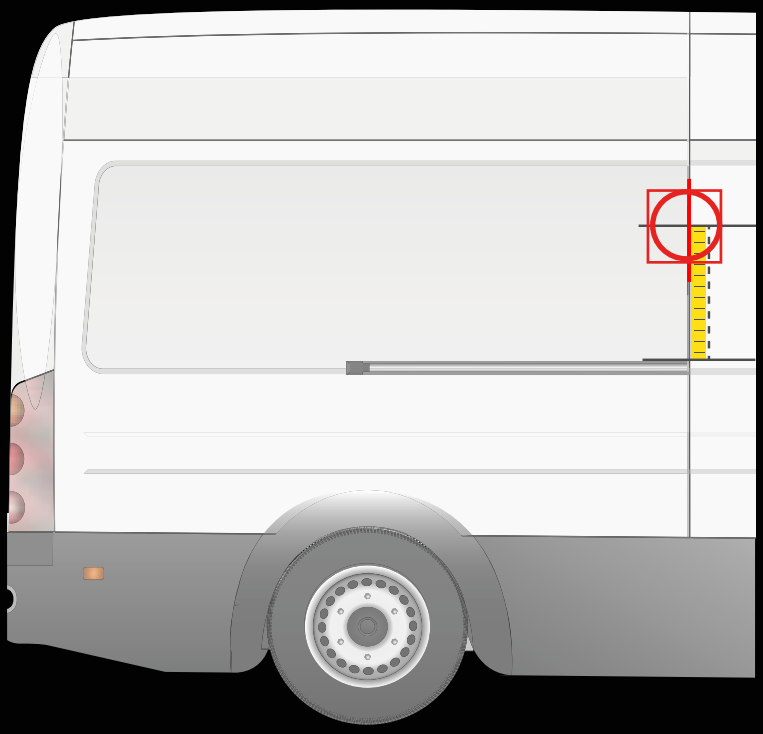

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**30 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


SATURN GO

TOYOTA

TOYOTA PROACE CITY > 2020




INSTALLATION ON THE REAR DOOR

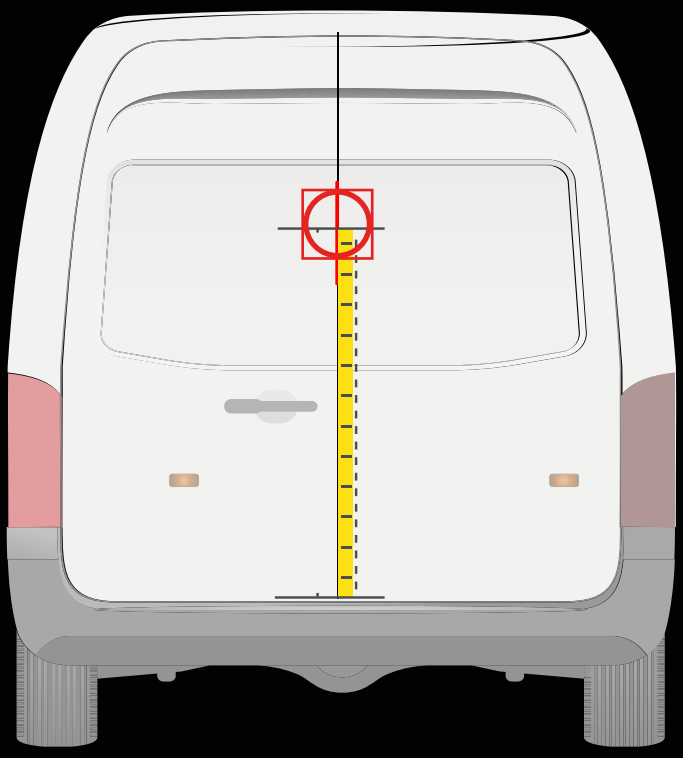

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**80 cm**

INSTALLATION ON THE LATERAL DOOR

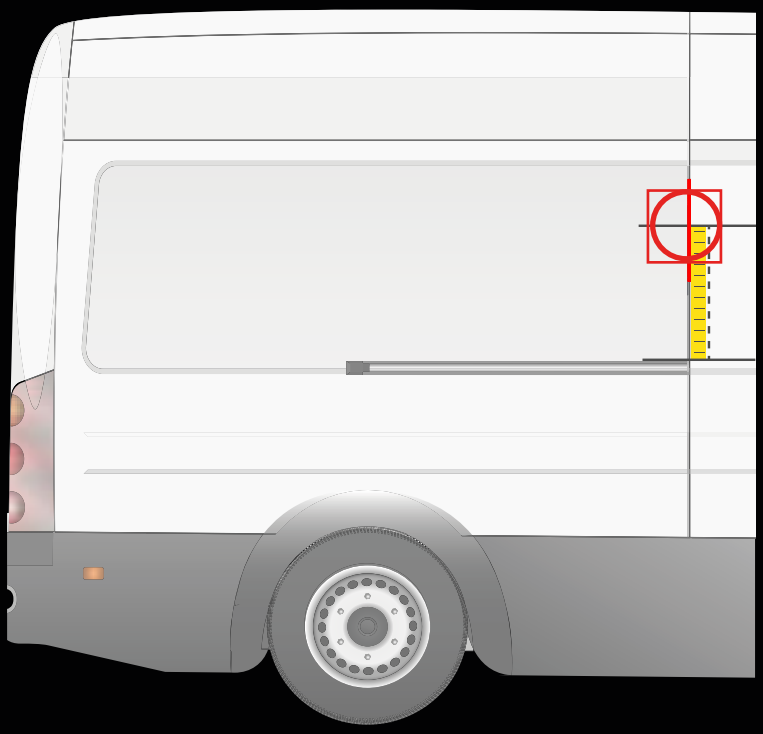

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**25 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.


SATURN GO

TOYOTA

TOYOTA PROACE > 2016




INSTALLATION ON THE REAR DOOR

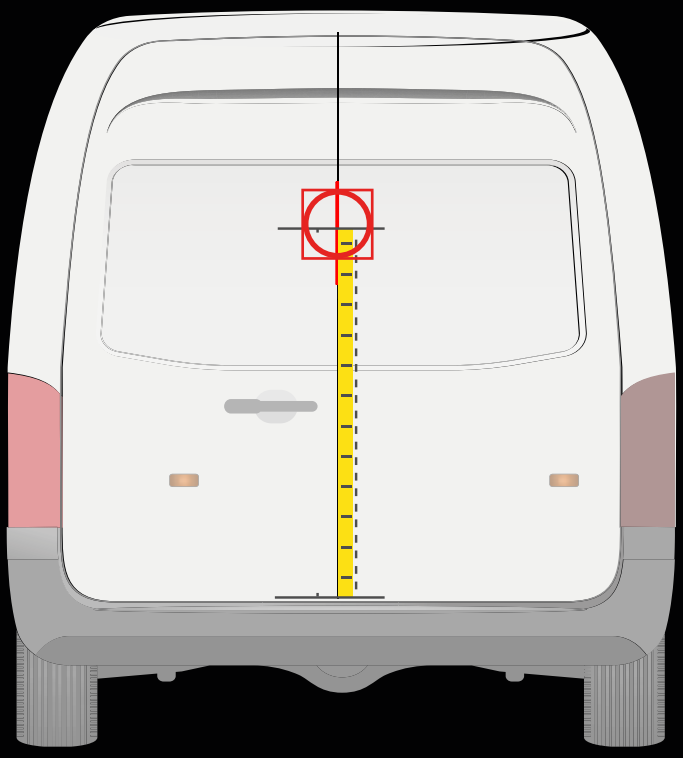

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**95 cm**

INSTALLATION ON THE LATERAL DOOR

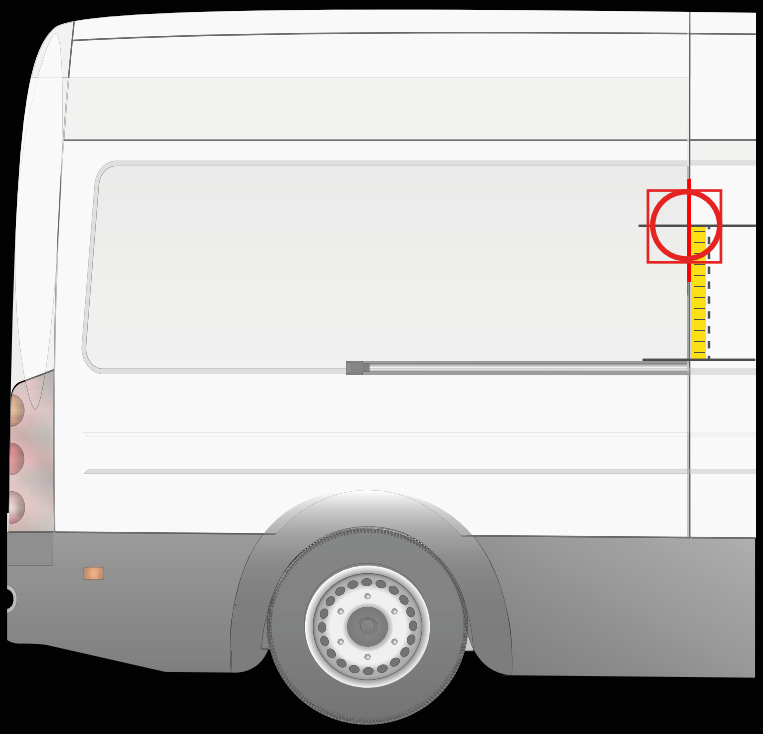

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**30 cm**


The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.

SATURN GO

VOLKSWAGEN CADDY
2021 - 2024




INSTALLATION ON THE REAR DOOR

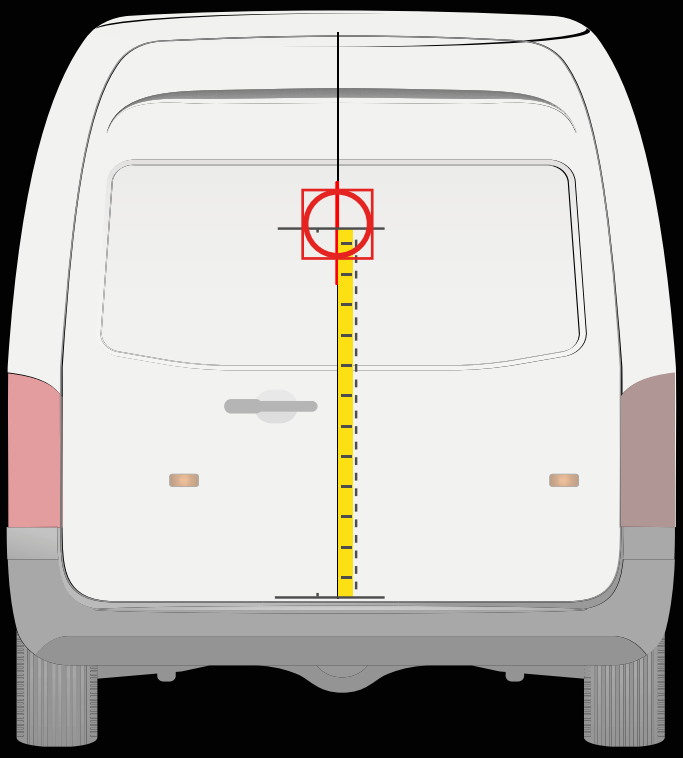

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**70 cm**

INSTALLATION ON THE LATERAL DOOR

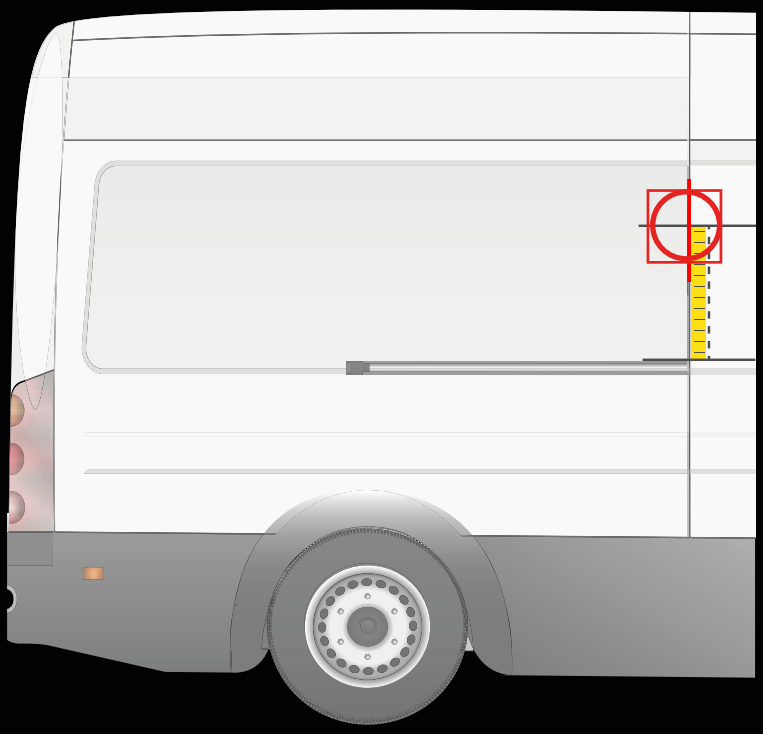

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**10 cm**


The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.

SATURN GO

VOLKSWAGEN CADDY > 2024




INSTALLATION ON THE REAR DOOR

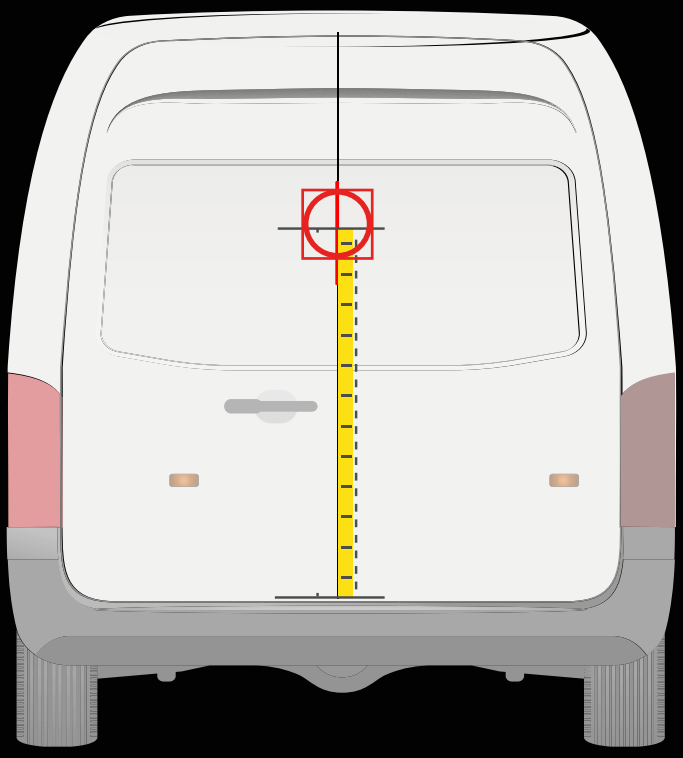

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**85 cm**

INSTALLATION ON THE LATERAL DOOR

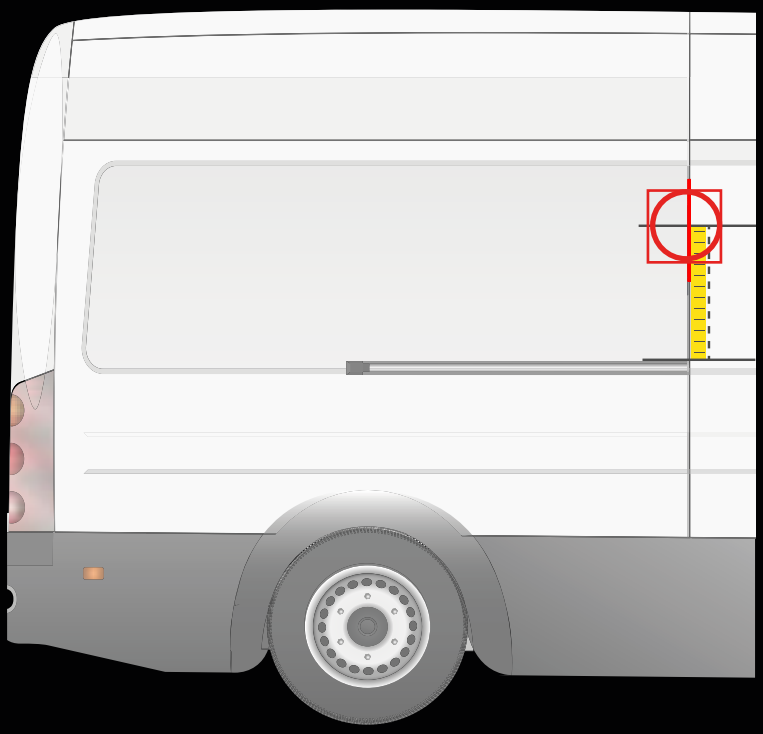

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**20 cm**


The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.

SATURN GO

VOLKSWAGEN TRANSPORTER > 2014




INSTALLATION ON THE REAR DOOR

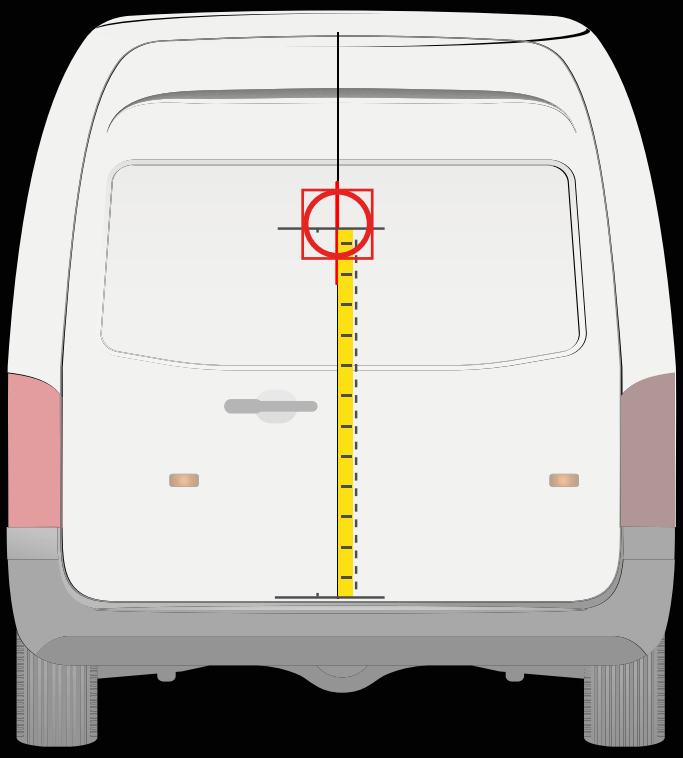

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**95 cm**

INSTALLATION ON THE LATERAL DOOR

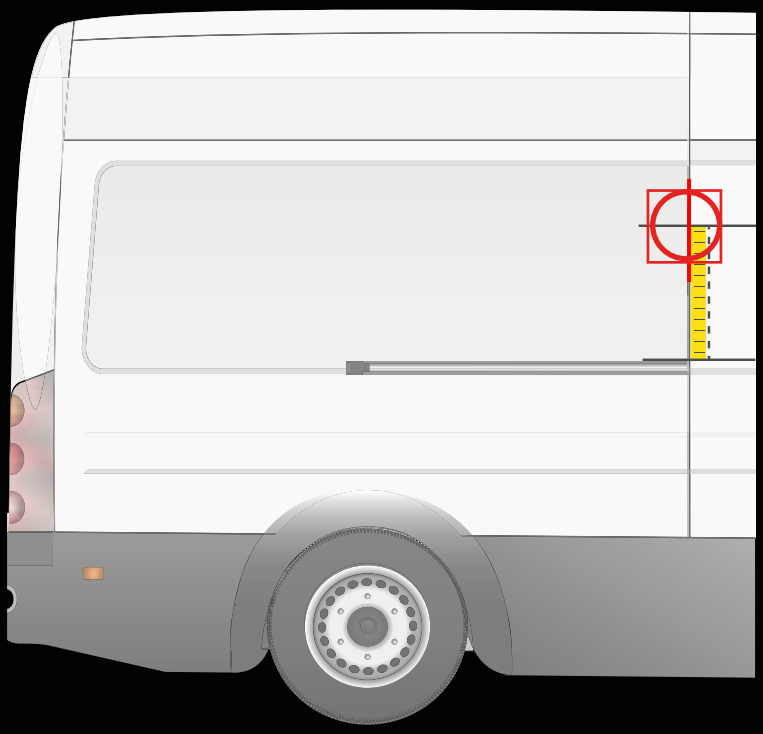

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**40 cm**


The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.

SATURN GO

VOLKSWAGEN ID-BUZZ
> 2022




INSTALLATION ON THE REAR DOOR

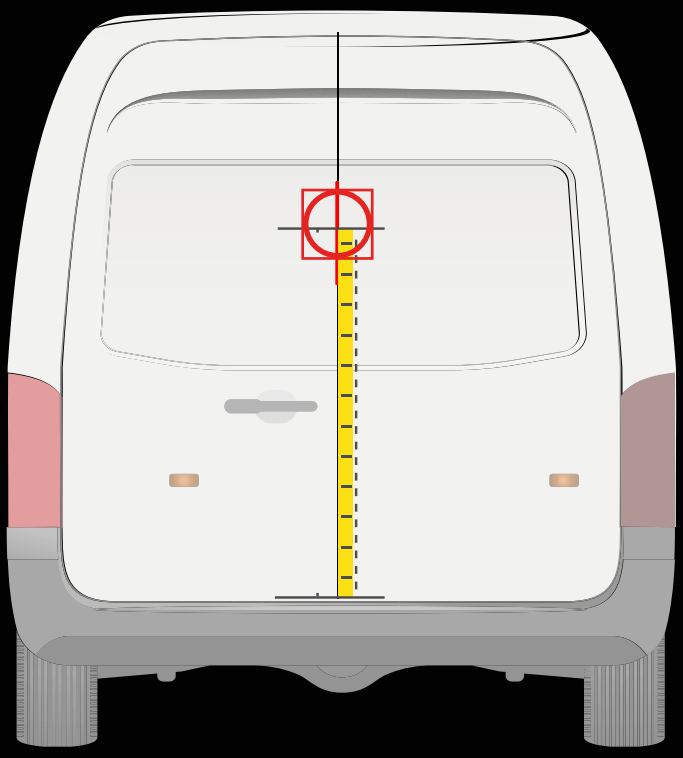

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**90 cm**

INSTALLATION ON THE LATERAL DOOR

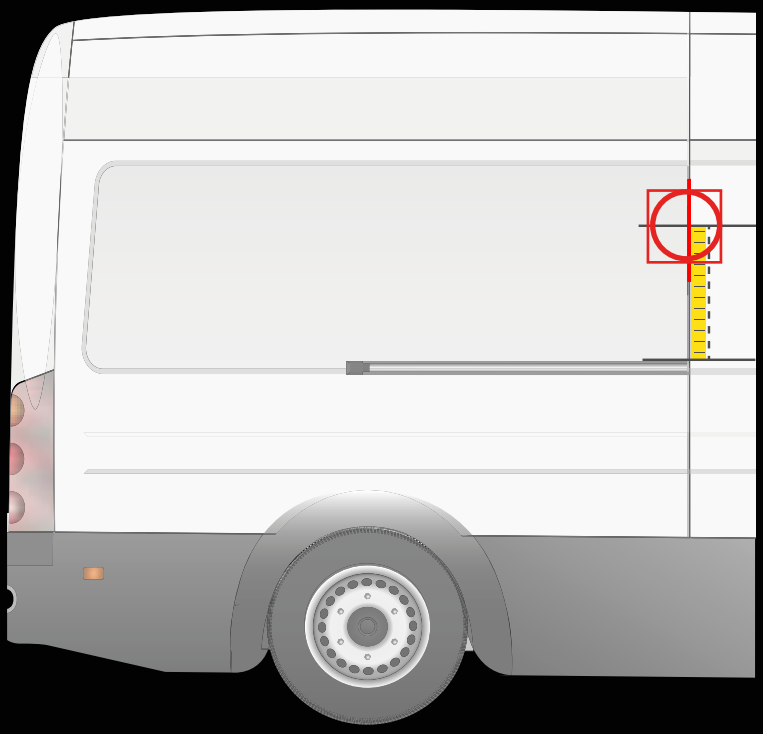

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**20 cm**


The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.

SATURN GO

VOLKSWAGEN CRAFTER > 2016




INSTALLATION ON THE REAR DOOR

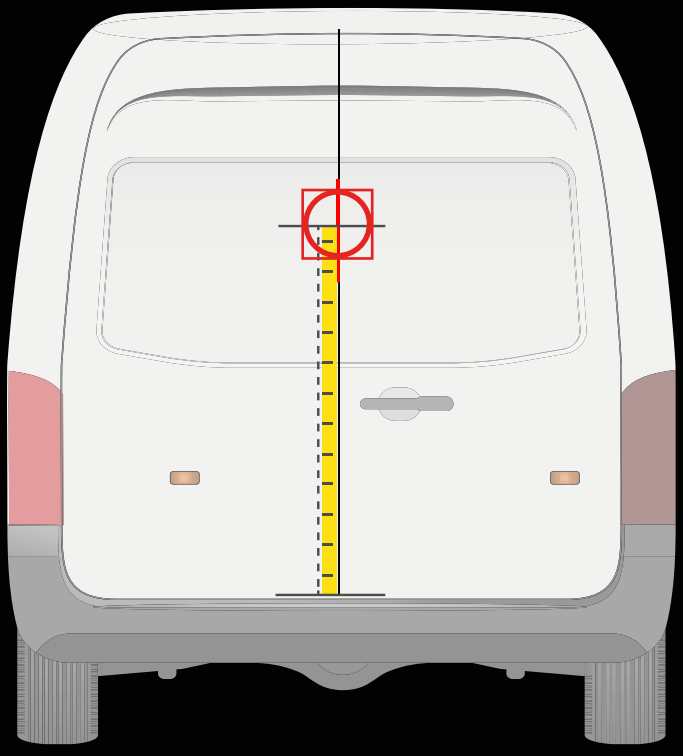

! Place the drill template as shown in the picture.

Distance from the bumper to the central axis of the drill template	**140 cm**

INSTALLATION ON THE LATERAL DOOR

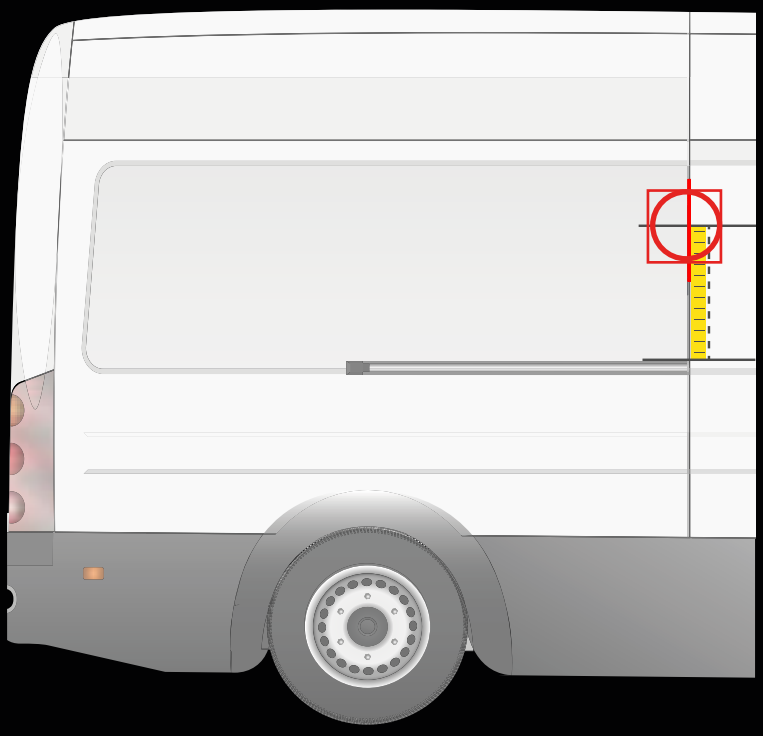

! Place the drill template as shown in the picture.

Distance from the door track to the central axis of the drill template	**20 cm**

The above height recommendations are a guide, other mounting heights are possible. Choose a flat area on the door that does not cause interference.